

U504TL

User Manual



Conventions used in this guide

In this user guide, we use the following symbols to indicate useful and important information:

NOTE

Notes, usage tips, or additional information



Warning

Situations that could cause injury to yourself or others



Caution

Situations that could cause damage to your device or other equipment

Specifications	2
Basics	3
In Box	3
Phone Overview	3
Battery	3
MicroSD Card	5
Turning Phone On or Off	5
Touch screen Gestures	6
Using the Onscreen Keyboard	6
Editing Text	7
Getting Started	9
Google Account	9
Getting to Know the Home Screen	10
Customizing the Home Screen	10
Essential Display Icons	12
Notifications Panel	13
Opening & Switching Between Applications	13
Sleep Mode	14
Adjusting Volume	15
Searching Your Phone and the Web	15
Connecting Your Phone to a Computer	16
Phone Calls	17
Making Calls	17
Answering or Rejecting Calls	18
Using In-Call Options	19
Using Call Log	19
Listening to Your Voicemail	20
Using Voice Dialer	21
Contacts	22
About contacts	22
Opening Your contacts	22
Getting Started	22
Editing/Deleting Contacts	24
Communicating	25
Account Setting	25
Messages	26

About Messages	26
Sending Messages	26
Reading Messages	27
Receiving Emergency Alerts Messages	28
Changing Messages Settings	29
Google	30
Gmail	30
Maps	31
Calendar	33
Play Music	35
Google Play Store	35
Web	38
Chrome	38
YouTube	40
Wi-Fi	42
Downloads	43
Bluetooth	44
Using Bluetooth	44
Disconnecting or Un-pairing from a Bluetooth Device	44
Connecting to a Bluetooth Headset	45
Sending and Receiving Information Using Bluetooth	45
Entertainment	47
Camera/Camcorder	47
Sound Recorder	48
Tools	49
Clock	49
Calculator	50
Settings	51
Settings on Your Phone	51
Firmware Upgrade	54
Safety and use	55
Please read before proceeding	55
Limitation of damages	55
Important health information and safety precautions	56
Regulatory agency identifications	62

**HEARING AID COMPATIBILITY HAC FOR WIRELESS
TELECOMMUNICATIONS DEVICES..... 63**

Specifications

1. Display

- 5 inch WVGA (854*480) Display
- Capacitive Touch Screen

2. Camera

- Front camera: 2.0MP
- Rear camera: 5.0MP

3. Dimensions and Weight

- Dimensions: 146.1*72.4*11.5 mm
- Weight: 166g.

4. Memory

- 16GB (ROM)/2GB (RAM)
- External memory : Supports up to 128GB

5. Operating System

- Android 8.1 Oreo

6. Connectivity

- WIFI(802.11 b/g/n), Bluetooth4.0

7. Sensors

- Accelerometer, Proximity sensor, Geomagnetic sensor, Ambient Light sensor

8. Power Management (Performance)

Battery Type	Capacity	Standby Time	Talk Time
Lithium-Ion(Li-ion)	2300mAh	Up to 180 Hours	Up to 9.5 Hours


Basics

In Box

The U504TL comes with the following items included in the box:

1. Mobile phone
2. Micro USB cable
3. Battery cover
4. Battery
5. USB power adapter
6. QSG

Phone Overview

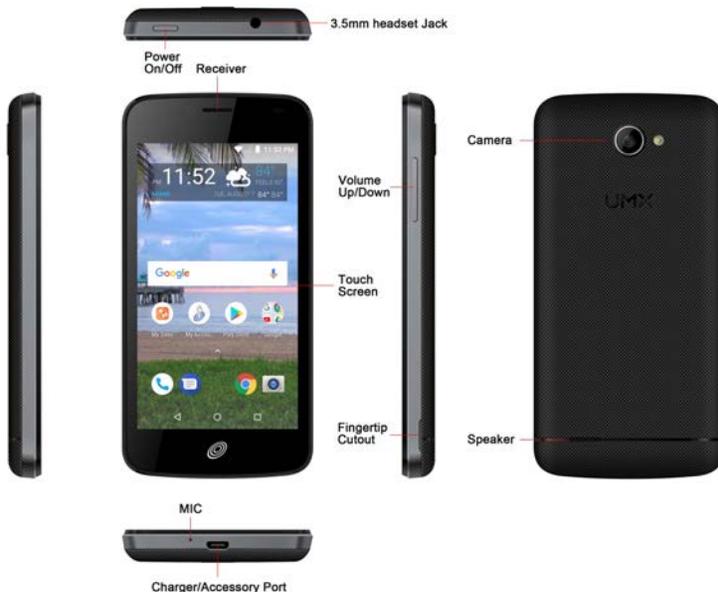

Battery


Note that browsing the web frequently, extended data usage, being in a poor signal area, or subjecting the device to extreme temperatures will cause the battery to discharge quicker than normal. To increase battery life, limit your data usage, or turn off GPS and Bluetooth when not required.

1. Installing the battery




Please use only the original batteries and accessories you received with your phone or UMX recommended replacements.

1. Remove the battery cover from the unit.
2. Align the battery's exposed gold contacts with the battery connectors inside the battery compartment.
3. Insert the battery with the contacts aligned to the connectors.
4. Gently push the battery into the battery compartment and press down until you hear a click. Replace the battery door.

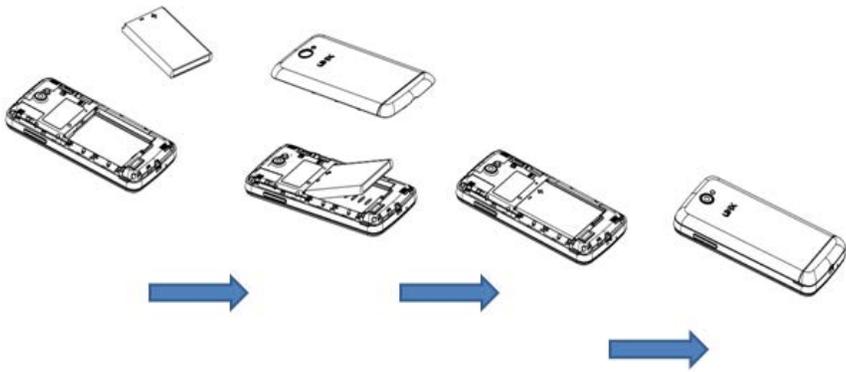

2. Removing the battery

1. Make sure that your device is turned off. To remove the battery cover from your phone, open the back cover using your finger at the small opening on the left of the phone.
2. Push the bottom of the battery upwards and remove the battery.

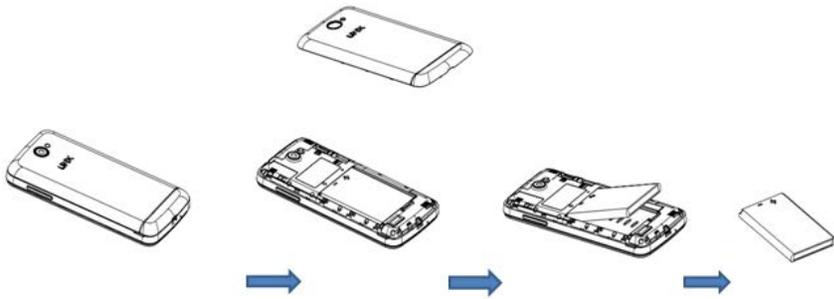

3. Charging your battery


Before you turn on your device and start using it, it is recommended that you charge the battery.

1. Connect the USB cable to the USB power adapter.
2. Connect the power adapter to a standard outlet.

3. Locate the USB port located on the underneath of your device.
4. Plug the other end of the USB cable into the phone's micro USB port.
5. The USB icon on the cable should always face up when connecting the cable to your device as shown.

NOTE

- It is more efficient to charge the battery with your device powered off.
 - Battery operating time gradually decreases over time.
-

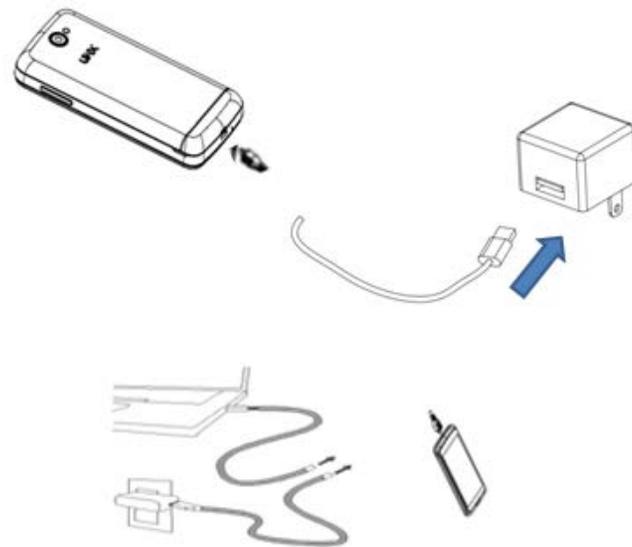

MicroSD Card


Use the microSD card to store your photos, videos, music and certain apps from Google Play™ Store. You can also move and copy files to your computer from your device.

NOTE When you insert or remove the microSD card, you should remove the battery cover.

1. Insert the microSD card

1. Locate the microSD card slot and remove the cover.

Insert the microSD card into the slot with its gold contacts facing left above battery until it clicks into place.

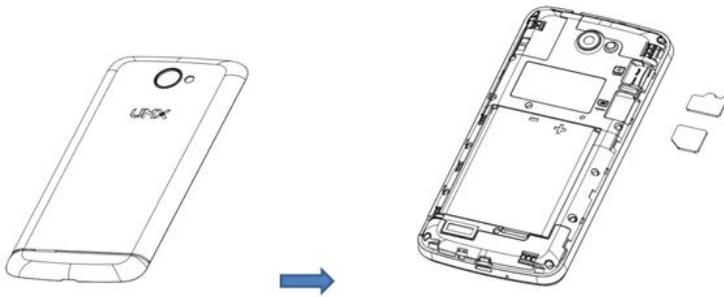

2. Removing the microSD card

1. Remove the microSD card cover.
2. Slide the microSD card out from the slot.

3. Removing the microSD card while the phone is on

If you need to remove the microSD card while the phone is on, unmount the microSD card first to prevent corrupting or damaging the files in the microSD card.

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Storage** > **Unmount SD card** > **OK**.
3. Remove the microSD card by following the steps in “Removing the microSD card”.

Turning Phone On or Off

1. Turning your phone on

1. Press and hold  **Power/Lock**.

NOTE The first time you use your phone you'll need to set it up. See the Getting Started chapter for details.

2. Turning your phone off

1. If the display is off, press  **Power/Lock** to turn it back on.
2. Press and hold  **Power/Lock** for a few seconds.
3. When Phone options menu appears, tap  **Power off** > **OK**.

Touch screen Gestures

Tap	To select onscreen items such as application and settings icons or press onscreen buttons, simply touch them with your finger.
Tap and hold	To open available options for the item, simply touch and hold your finger on the screen over the item.
Swipe or slide	Quickly drag your finger vertically or horizontally across the screen.
Drag	Tap and hold your finger before you start to drag. While dragging, do not release your finger until the item reaches your desired location.
Flick	Flicking the screen is similar to swiping, but you only need to swipe your finger in lighter and quicker strokes. This finger gesture is always in a vertical direction, such as flicking through the contacts or the message lists.
Rotate	For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger on-screen keyboard.

Using the Onscreen Keyboard

You can enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, tap anywhere in a text field to open the keyboard.

1. Tap each letter on the on-screen keypad.
2. Tap and hold a letter for additional key options (not all keys have additional options). Additional key options include numbers and letters with accent marks. If options are available, you will see a box with all the options shown. Slide your finger to select the character you want.
3. Continue until you have finished the word.

You can also use the following icons:



- Tap **3** while you type. When you release the key, the lowercase letters reappear.
- **Turn caps lock on.** double-tap or touch & hold
- Tap **3**, so it changes to . Touch  shift key again to return to lowercase.
- Tap **1** you can to delete words, tap **4** you can change to the number and sign keyboard.
- To hide the Android keyboard, press **Back** .
- When you write a new mail, you can tap **2** to skip from the subject frame to text frame.

NOTE When you tap Settings > System > Languages & input > Virtual keyboard > Manage keyboards, you can set the input methods.

Adding, Editing or Deleting Words in the User Dictionary
Sometimes you may need to add a word to the predictive text dictionary, for example, a name or a specialized technical word. If you want to add a word to your User dictionary while entering text, double tap the word to highlight it, then tap and hold the word and select **Add to dictionary**.

Adding a word manually

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **System** >  **Language & input** > **Personal dictionary**.
3. Press  **Add**.
4. Type the word > tap  **Back**.

Editing or deleting a word

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **System** >  **Language & input** > **Personal dictionary**.
 - To edit words from the dictionary, tap the word you want to edit > Edit the word > tap  **Back**.
 - To delete words from the dictionary, tap the word you want to delete > **Delete**.

Editing Text

You can select, copy or cut the text you've entered, then paste it in another text field within the user interface.

NOTE Some applications may offer different text editing methods.

1. Selecting text

1. Tap the text field.
2. Move the cursor to the beginning or end of the desired text by tapping in the location you want the cursor.
3. Tap and hold the text field.
4. Tap **Select word** in the pop-up menu.
 - Or tap **Select all** to select all the text in the text field.
5. Drag your finger to move the text cursor to a letter within the text that you want to select. The selected text is highlighted in green.

2. Cutting and copying the text

1. Double-click to select the text to cut or copy it.
2. Tap and hold the selected text.
3. Tap **Cut** or **Copy** in the menu that opens.



- If you tap **Cut**, the selected text is removed from the text field. In this case, the text is saved to the clipboard, so that you can paste it into another text field.

3. Pasting the text

1. Cut or copy the text to paste.
2. Tap the text field where you want to paste the text and move the cursor to your desired location.
 - You can paste text that you copied from one application into the text field in any other application.
3. Tap and hold then select **Paste** in the pop up menu.
 - The text is inserted after the cursor. The text also remains in the clipboard, so you can paste that same text into another location.

Getting Started

Google Account

You must sign in to a Google account to use Gmail, Google Calendar, and other Google applications; to download applications from Google Play Store; to back up your settings to Google servers; and to take advantage of other Google services on your phone.

1. Registering a Google account

Gmail, Google Play Store, and other applications require a valid Google account for use. You will be prompted to login into Google the first time you use these applications.

1. Enter your Google account **Email** > Tap **NEXT**.
 - If you don't have a Google account, tap **Create account** instead. See the next section for more details.
2. Enter your Google account **Password** > Tap **NEXT**.

2. Creating a new Google account

1. Tap **Create account** > Enter **First name**, **Last name** and **Email** > Tap **Next**.
2. Input your phone number to get a verification code
3. Enter a password in to the **Type a password**, **Confirm password** fields, then tap **Next**.
 - Password tip: Your password must be a minimum of 8 characters in length.


4. Select **Security question** and enter the **Answer**, which will be needed if you forget your password and then enter a **Secondary Email** > **Create**.
5. Read through Google Terms of Service > Tap **I agree**, **Next**.
6. Enter the letters shown on the screen > Tap **Next** > Tap **Finish**.

3. Adding a Google account

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Users & Accounts** > **+ Add account**.
3. Tap **Google**.
4. Enter your Google account **Email** > Tap **NEXT**.
5. Enter your Google account **Password** > Tap **NEXT**.
6. Tap **I AGREE**.
 - The U504TL supports multiple Google accounts.
 - If you have the same contact across multiple Google accounts, you can merge duplicates into a single item in the contact list.

Getting to Know the Home Screen

1. The Home screen is displayed when the device is in idle mode. You can add your favorite apps, shortcuts, folders and widgets to the Home screen so they're only a tap away.
2. Press  **Home** to return to the center home screen.

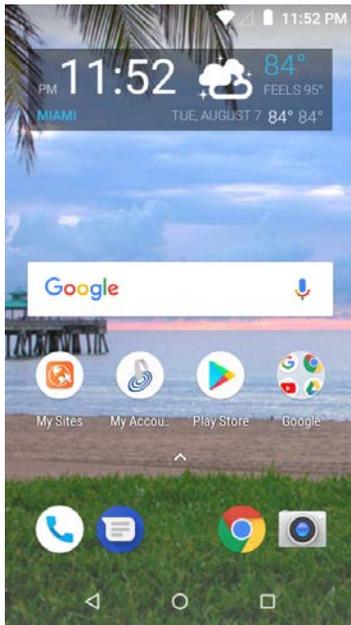

1. Previewing the Home screens

1. From any Home screen, tap and hold an application.
2. When you choose a desired Home screen, the application shifts to the selected Home screen.

Customizing the Home Screen

The Home screens and display wallpaper are customizable.

1. Home screen customization options

Open the Home screen you want to customize.

2. Moving an item on the Home screen

1. From the Home screen, tap and hold the item you want to move until it vibrates. Don't lift your finger.
2. Drag the item to a new location on the Home screen.
3. Lift your finger at the location where you want the item.

To add a shortcut for any application to a Home screen, tap  **Apps**, tap and hold the item, then drag it onto a Home screen.

3. Removing an item from the Home screen

1. From the Home screen, tap and hold an item until it vibrates. Don't lift your finger. The × Remove icon will appear at the top of the display.
2. Drag the item to × Remove.
3. When the item turns grey, lift your finger.

4. Changing the Wallpaper of the Home screen

1. From the Home screen, tap and hold any empty area on a Home screen long time.
2. Tap **WALLPAPERS**:
From the list of menus, Choose a photo from your camera gallery or memory card storage.
3. Tap **Set wallpaper**.

Essential Display Icons

1. Status icons

You can tell a lot about your phone when you understand the icons in the Status bar. Here's what each one means:

	Signal strength		Synchronized with the web
	No signal		Vibrate only mode
	4G network connected		Speakerphone is on
	Wi-Fi signal strength		Silent mode-no audio or vibration
	Airplane mode		Microphone is muted
	Data synchronizing		It indicates that battery is remaining
	Bluetooth is on		Data Saver is on
	Storage is insufficient		

2. Notification icons

Notification icons in the Status bar alert you to items that may require your attention such as new messages, calendar event reminders, missed call notifications, etc.

Here's what each one means:


	Call in progress		Downloading data
	Missed call		Uploading data (animated)
	Call Diverted		General Warning Icon
	More (not displayed) notifications		Headset is inserted
	New Google Talk instant message		MicroSD card is being prepared
	New voicemail		Upcoming event
	New message		Alarm is set
	New Gmail		Wi-Fi is on and wireless networks are available
	Connected to or disconnected from VPN		Song is playing

Notifications Panel

When you receive a new notification, an icon will be displayed in your status bar at the top of your screen.

1. Viewing and responding to Notifications

1. Tap and hold Status bar, and then slide your finger downward to open the Notifications panel.

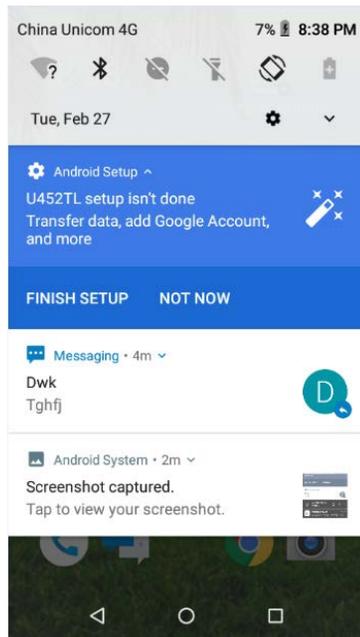

2. If you have multiple notifications, you may need to scroll to see them all.
3. Tap a notification to respond to it.

2. Closing the Notifications panel

Drag the bottom bar of the panel up. Or just press  Back.


Opening & Switching Between Applications

1. Opening and closing the Applications List

1. From the Home screen, tap  Apps.
2. To close, press  Home or  Back.

2. Switching to a recently used application

1. From any screen, tap  Recent apps. Scroll to see all recently used application.

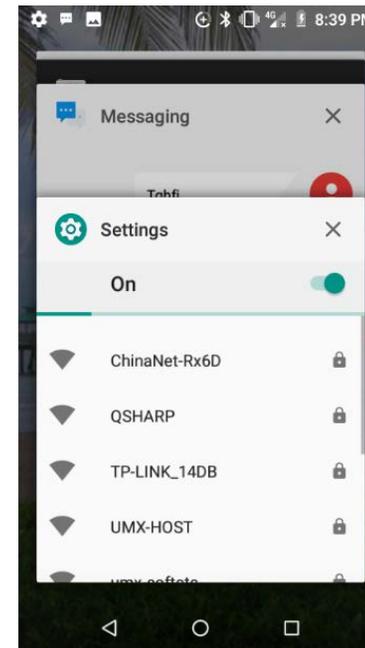

2. Tap an icon to open the application or press  Back to return to your previous screen.

Sleep Mode

Sleep mode saves battery power by turning off your display. You will still receive messages and calls when the display is turned off.

1. Switching to Sleep mode

1. Press  **Power/Lock** to switch your phone to Sleep mode.
2. Your phone automatically turns off the display after a period of inactivity. To customize the screen timeout settings, from the Home screen, tap  **Apps** >  **Settings** >  **Display** > **Sleep**.

2. Waking up from Sleep mode

1. Your phone automatically wakes up when you have an incoming call.
2. To wake it up manually, press  **Power/Lock**. You'll need to unlock the screen as described below.

3. Unlocking the screen

On the lock screen, tap the unlock icon and slide your finger in the direction of the arrows to unlock the screen. The screen unlocks automatically when you answer an incoming call.

NOTE If you have set up a screen unlock pattern, pin, or password, you will be asked to draw the pattern on the screen or enter the PIN or password to access the phone software.

4. Activating Secure Screen Lock

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Security & location** > **Screen lock**.
 - If you have already configured the screen lock, tap **screen lock** to change how to lock or unlock your screen.
3. Tap Pattern, PIN, Password. Then enter a custom pattern, PIN or password as prompted.
 - If you select 'None', screen unlock security is cancelled.

Adjusting Volume

Ringtone and Media volume are independent of each other and adjusted separately.

1. Adjusting the ringer volume

From the Home screen, press **Volume up** or **Volume down** on the right side of the phone to adjust the ringer volume to your desired level.

- While in the lowest ringer volume level, press **Volume up** or **Volume down** once to set your phone to Vibrate mode. To set your phone to Silent mode, you can press **Volume down** once again.
- While in the Silent mode or Vibrate mode, press **Volume up** once to switch to ringtone mode.

2. Adjusting the media volume

While playing music, watching a video or using preloaded or downloaded games or applications, press **Volume up** or **Volume down** on the right side of the phone to adjust the media volume.

3. Adjusting the earpiece volume for phone calls

During a phone call, press **Volume up** or **Volume down**.

4. Adjusting the volume via Settings menu

1. From the Home screen, tap  **Apps** >  **Settings**.

2. Tap  **Sound** > **Volumes**.
3. Drag the volume sliders left or right to adjust your phone's Ringtone, Media, and Alarm. Your phone plays a sample tone at the selected volume level while you drag the slider.
4. When you're done, tap  **Back** or  **Home**.

Searching Your Phone and the Web

The search key is a powerful part of the U504TL's software and enables you to quickly locate files, contacts, and applications. You can also search the web using your favorite web search service.

1. Tap  **Apps** >  **Google**.
2. Begin entering text, or tap a previously used search term.
 - As you enter the text, matching items on your phone and suggestions from Google web search will appear on the screen.
3. Tap a suggestion to go directly to that result.

Connecting Your Phone to a Computer

1. Copying files to/from the microSD card

You can copy your music, photos, and other files to the microSD card of your phone.

NOTE This option is available only when a microSD card is inserted into the slot of your phone..

1. Connect your phone to your computer using the supplied USB cable.
2. Open the Notifications panel > tap **USB for file transfer options**.
3. On your computer, the connected phone is recognized as a removable hard drive.
4. Navigate to the removable drive and open it.
5. Do one of the following:
 - Copy the files from the computer to the microSD card's root folder.
 - Copy the files from the phone's microSD card to a folder in your computer.
6. After copying the files, un-mount the removable drive (that is, your phone) as required by your computer's operating system to safely remove your phone.

7. After you have un-mounted the removable drive, you can disconnect the phone from the computer.

Phone Calls

Making Calls

The simplest way to make a call is to dial the number directly. You can also call numbers listed in your call log or Contacts list.

1. Making a call from the dialer screen

1. From the Home screen, tap  **Phone**. Or tap 
Apps >  **Phone**.
2. Tap the number you want to dial.
 - If you make a mistake, tap  to erase a single character. Tap and hold  to erase the entire string.
3. Tap  **Dial**.
 - The Calling screen is shown and  appears in the Status bar while the call is active.
 - To change the volume during a call, press **Volume up** / **Volume down**.
4. To end the call, tap  **End Call**.

2. Entering a Pause/Wait

Pause and wait options can help you dial additional numbers such as a voicemail password, or phone banking system menus.

1. From the Home screen, tap  **Phone**.
2. Tap the number you wish to dial > tap  **Option**
> **Add 2-sec pause** or **Add wait**.

- **Add 2-sec pause:** Your phone will wait for 2 seconds then continue to dial the remaining numbers automatically.
- **Add wait:** Your phone will wait with the message, ‘Send the following tone?’ until **Send** is tapped, then continue dialing the remaining numbers.

3. Making an international call

1. From the Home screen, tap  **Phone**.
2. Tap and hold **0** until the international prefix ‘+’ appears.
3. Tap the country code, area code, and phone number.
4. Tap  **Dial**.

4. Calling a number from the Call log

Your phone logs all incoming and outgoing calls.

1. From the Home screen, tap  **Phone** >  **Call log**.
2. Tap  **Dial** at the right of any entry to dial.
 - Calls are listed with the most recent at the top.
 - Calls to the same phone number are grouped together.
 - Scroll up or down to view additional entries in the log.
 - If you want to edit a number before calling, tap and hold the desired number, and then tap **Edit number before call**.

5. Making a call from the Contact list

1. From the Home screen, tap  **Phone** >  **Contact list**. Or tap  **Apps** >  **Contacts**.

2. Scroll through the contact list.
 - To find a specific contact, you can search by tapping  **Search**. Enter the name of the contact you're searching for. As you type, contacts with matching names appear below the search box. Or you can use the tab on the right hand side of the screen to scroll through the alphabetical contacts.
3. Tap the contact you want to call.
4. Tap the phone or mobile number.

6. Making an emergency call

Your phone supports international emergency numbers such as 911. Emergency calling is supported anywhere the phone has a network signal.

1. Making an emergency call

1. From the Home screen, tap  **Phone**.
2. Tap the emergency number for your location. This is usually **911**, ***911** or **#911**.
3. Tap  **Dial**.
4. To end the emergency call, tap  **End Call**.

2. Making an emergency call while the phone is locked

1. When your phone is no service status, **Emergency call** button is displayed on the lock screen. Tap **EMERGENCY**.
2. Tap the emergency number for your location. This is usually **911**, ***911** or **#911**.
3. Tap  **Dial**.
4. To end the emergency call, tap  **End Call**.


Answering or Rejecting Calls

When you receive a phone call, the screen displays the caller's name, phone number, and caller ID icon (if stored in Contacts). When you receive a phone call from a phone number not stored in your Contacts, only the default caller ID icon and phone number are shown.

All incoming calls are recorded in the Call log. If you miss a call, you receive a reminder notification.

1. Answering or rejecting an incoming call

1. Swipe up from the  icon to answer the call.
 - If you were already in a call, the first call is placed on hold during answering the new call.
 - To silence the ringer before answering the call, press either of the volume keys.

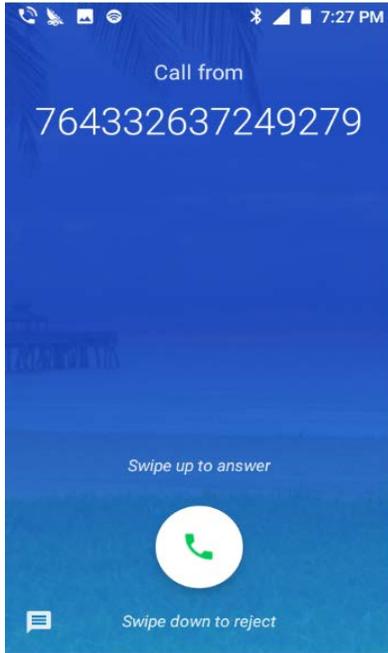

NOTE The caller you reject is sent directly to your voicemail box to leave a message.

2. Checking missed calls

- If you miss a call,  is displayed in the Status bar.
- If you open the Notifications panel, you will see the number of missed calls. Tap the notification to be taken to the call log and view detailed information.

Using In-Call Options

When a call is in progress, the following options are available:

Dial Pad	Tap Dial Pad to enter additional numbers during your call.
Mute	You can unmute the microphone by tapping Mute icon again.
Audio	You can turn the speakerphone off by tapping the Speaker icon again.
Bluetooth	When a Bluetooth device is paired and connected to your phone, you can conduct all calls using Bluetooth for hands-free conversation. When using Bluetooth headset during a call, the current call screen has a blue border and the Ongoing Call icon turns blue in the Status bar. Tap Bluetooth icon to toggle in-call audio to and from the Bluetooth accessory.

NOTE To avoid damaging your hearing, do not hold the phone up to your ear when the speakerphone is on.


Using Call Log

The phone stores the numbers of all incoming and outgoing calls in the Call log. The Call log displays the details of the call including time, date, and duration.

1. Opening the Call log

1. From the Home screen, tap  **Phone** >  **Call log**.
 - Calls are listed with the most recent at the top. Calls of the same phone number are grouped together. Scroll to view earlier entries in the log.

NOTE You can tap and hold the desired number in the call log list to select options such as **Call**, **View contact**, **Edit number before call**, **Send a message**, **Add to contacts**, **Call details**, **Block number**.

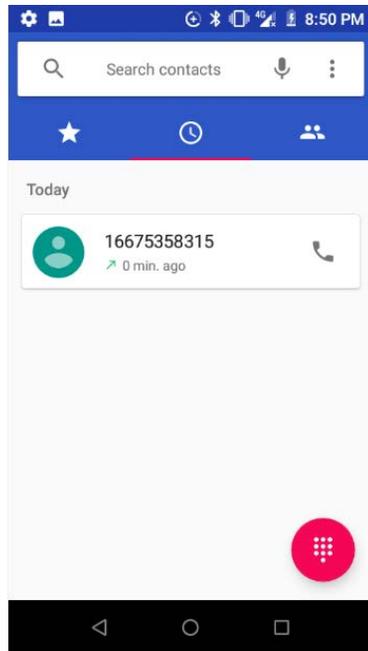

2. Calling a number from the Call log

1. From the Home screen, tap  **Phone** >  **Call log**.
2. If you want to call a number directly, tap  at the right of the entry. Or select a contact > tap  **Dial**.
 - If you want to edit a number before calling, tap

and hold the desired entry, and then tap **Edit number before call**.

3. Adding a phone number from your Call log to your Contacts list

1. From the Home screen, tap  **Phone** >  **Call log**.
2. Tap the desired entry > **Add to contact**.
3. In the list of contacts that opens, tap **Create new contact** or add to an existing contact.
4. Tap **SAVE**.

4. Sending a text message from the Call log

1. From the Home screen, tap  **Phone** >  **Call log**.
2. Tap the contact >  **Send text message**.
3. Enter your message and tap  to **Send**.

5. Clearing the Call log

1. From the Home screen, tap  **Phone** >  **Call log**.
2. Tap  **Option** > **Call history** > Tap  > **Clear call history** > **OK**.
 - To remove just one entry from the Call log, tap the entry. In the pop up options, tap **Call details** > click **Delete icon** > **OK**.

Listening to Your Voicemail

Voicemail application is displayed only when phone calls are available. When you have a new voicemail message,  appears in the Status bar.

1. Calling your voicemail from the Dial Pad

1. From the Home screen, tap  **Phone**.
2. Tap your phone number and tap  **Dial**.

2. Calling your voicemail from the Notification panel

1. Open the Notifications panel and tap “**New voicemail**”.

Using Voice Dialer

You can use the Voice Search application or Voice Dialer application to place a phone call by speaking the name of a contact or a phone number.

1. From the Home screen, tap  **Phone** >  **Search contacts**.
 - If you have a Bluetooth headset that supports “voice-recognition” or “voice-dialing,” you may be able to open Voice Search by pressing and holding your headset’s main button and dial by voice using your headset. For details, see your headset manual.
2. Say the name of the contact you want to call
 - Or, follow one of the suggestions for dialing a number or controlling your phone in other ways.

Contacts

About contacts

Contacts give you quick and easy access to the people you want to reach. Contacts from Google accounts are also downloaded and synced with the Contact list.

You can manage your communications with your contacts via phone, messaging, and email without the need to jump from one app to another.

Opening Your contacts

Open contacts to add, view, and communicate with your friends and acquaintances.

1. From the Home screen, tap  **Apps** >  **Contacts**.

- All of your contacts are displayed alphabetically in a scrolling list.
- You can use the tab on the right hand side of the screen, or flick your finger up or down to scroll quickly.

Getting Started

1. Adding a new contact

1. From the Home screen, tap  **Apps** >  **Contacts**.

2. Tap  **Create new contact**.

3. If you have more than one account, select an account then enter the information for the contact.

- Tap  > select **Take photo** or **Choose photo from Gallery** to add a picture.

- Enter your contact's information.

4. Tap **SAVE**.

Saving a phone number from the Dial Pad

1. From the Home screen, tap  **Phone**.

2. Enter the number > Tap  **Create new contact**.

3. Enter the information for the contact > tap **SAVE**.

Storing a contact using Call log

1. From the Home screen, tap  **Apps** >  **Phone**.

2. Tap  **Call log** > tap the number you want to save > **Add to contacts**.

3. Tap **Create new contact** or select an existing contact.

4. If you have more than one account, tap the account where you want to save the contact > enter the information for the contact > tap **SAVE**

2. Importing / Exporting / Sharing contacts

Importing contacts from your microSD card

If you have contacts stored in vCard format on the microSD card, you can import them into Contacts on your phone.

1. From the Home screen, tap  **Apps** >  **Contacts**.

2. Tap  >  **Settings** > **Import**.

3. Tap **Import contacts from .vcf file**.

4. If you have more than one account on your phone, select the desired account.

5. Tap the vCard files on the microSD card. The contacts are imported.

Exporting contacts to your microSD card



1. From the Home screen, tap  **Apps** >  **Contacts**.
 2. Tap  >  **Settings** > **Export**.
 3. Tap **Export to .vcf file**.
 4. Select path, tap **SAVE** to confirm.
- This process creates a file containing all your selected contacts with a .vcf extension on your microSD card.

Sharing visible contacts

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap  >  **Settings** > **Export**.
3. Tap **Share all contacts** > tap the exported finished notification > Select  **Bluetooth**,  **Gmail**,  **Save to Drive**.

3. Viewing details about a contact

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact whose details you want to view.
3. Tap the communication icon to start dialing, texting, or emailing the contact.

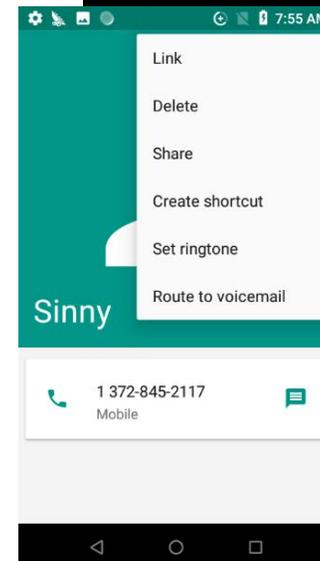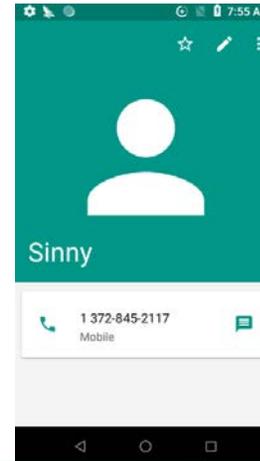

4. Search for a contact

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Search**.
3. Start entering the contact's name.
As you type, contacts with matching names appear below the search box.
4. Tap the matching contact in the list to open.

Editing/Deleting Contacts

1. Editing contact details

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact you want to edit > Tap  **Edit contact**.
3. Edit the contact information.
4. Tap **SAVE**.

2. Setting a contact's default phone number/email

Setting a contact's default phone number

The default phone number is used when you initiate a call or text message by tapping and holding a contact.

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Find the desired contact > Tap and hold the phone number to designate it as the default phone number.
3. Tap **Set default**.

- The default phone number will display on the top.

Setting a contact's default email

The default email is used when you send an email from the list by tapping and holding a contact.

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Find the desired contact > Tap and hold the email address to designate it as the default email address.
3. Tap **Set default**.

- The default email will display on the top.

3. Setting a ringtone for a contact

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the desired contact > Tap .
3. Tap **Set ringtone**.
 - Tap a ringtone from the list to play when the contact calls. A sample of the ringtone is played.
4. Tap **OK**.

4. Adding a contact to your favorites

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the desired contact > Tap  .
 - To remove a contact from your favorites list, tap  **Contacts** > tap the desired contact > Tap .

5. Linking contacts

1. From the Home screen,  **Apps** >  **Contacts**.
2. Tap the contact you want to save. The others will merge into this file. This is the contact you will see in contacts after linking.
3. Tap  **Option** > **Link**.
4. Tap the contact you want to join with the first contact. The information from the second contact is added to the first contact, and the second contact is hidden.

6. Deleting a contact

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact you want to delete, tap  **Option** > **Delete**.
3. Tap **DELETE**.

Communicating

1. Sending text message

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact you want to send > tap  .
 - The Primary Phone Number is used, or you are prompted to choose a phone number.

2. Making calls

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to call > tap **the number**.
 - The Primary Phone Number is used, or you are prompted to choose a phone number.

3. Connecting by using Quick Contact

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap the icon or photo next to your desired contact > tap the desired communication method.
 - Only the icons relevant to your contact's data are displayed.
 - If there are too many icons to fit on the screen, drag to the left or right to select an icon.

Account Setting

1. Working with Google accounts

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap  >  **Settings** > **Accounts**.
 - After registering your Google account, your online Google contacts are synchronized to your phone.

Changes made online or on the phone are automatically synchronized and updated in both locations. This address book will be used throughout the user interface.

- If you register two or more accounts, you can merge address books from the multiple accounts into one address book.

2. Contact List Display and Settings Options

1. From the Home screen, tap  **Apps** >  **Contacts**.
2. Tap  >  **Settings** > **Contacts to display**.
 - Tap **All contacts**, all contacts will display in the contacts list.
 - Tap **Customize**, can customize view.
3. Tap  >  **Settings**.
 - Sort list by: Select **First name** or **Last name**.
 - View contact names as: Select **First name first** or **Last name first**.
 - About Contacts: Build version, Open source licenses, Privacy policy, Terms of service.

Messages

About Messages

Use Messages to send text messages (SMS) and multimedia messages (MMS) to other mobile phones and email addresses.

1. From the Home screen, tap  **Apps** >  **Messages**.

On the Messages screen, your sent and received messages are neatly grouped into conversations, by contact names or phone number. You can:

- Scroll up or down the list of conversations by flicking your finger on the screen.
- Tap a contact name or number to view the conversation history.
- Tap the photo or  to open additional menu options.

Sending Messages

1. Sending a Text Message

NOTE Depending on your billing plan, if you exceed the single text message character limit, you will be billed for multiple messages.

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Create New message**.

3. Enter the phone number in the **To** field. Fill in one or more recipients. You can:
 - Enter the first few letters of a contact name or phone number. Matching contacts are displayed. Continue typing or tap a name or phone number from the search results.
 - Tap  > Select message recipients from your contact list > **Ok**.
4. Tap **Type an SMS message** > enter your message.
 - Tap  **Menu** to see more options.

Archive	Archive conversation.
People & options	Notifications settings and people list in this conversation.
Search	Search the message.
Add contact	Add number to Contacts.
Delete	Delete this conversation.
Help & feedback	Support information and send feedback.

5. Tap  to **Send**.
 - Tap  **Back** to save the message as a draft.

NOTE Your text message automatically becomes a multimedia message on below condition:

- Add subject
- Attach an item

2. Sending a multimedia message (MMS)

To compose a multimedia message, start by creating a new text message. Then simply add an attachment.

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Create New message**.
3. Enter the phone number in the **To** field. Or select recipients from the contact list.
4. Tap **Send message** > enter your message. Tap  to add the message template.
5. Tap  **Attach** > choose the type of attachment.

• Pictures	Select a photo.
• Capture picture	Capture a new photo.
• Videos	Select a video.
• Capture video	Record a new video.
• Audio	Select an audio file.
• Record audio	Record a new audio file.
• Location	Share location.

6. From the message body, tap:
 - **View**: To view the attached item.
 - **Replace**: To change attached files.
 - **Remove**: To remove attached files.
7. Tap  **Send MMS**.
 - Tap  **Back** to save it as a draft.

3. Resuming a draft message

1. From the Home screen, tap  **Apps** >  **Messages**.

2. Tap the message indicated by “**Draft**” to resume editing.
3. When you finish editing, tap **Send**.

Reading Messages

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap a message thread.
3. Tap and hold an individual message to see more options.

Save to SIM card	To save the message to SIM card.
Call icon	To call the message sender
Add to Contacts	To save the phone number or email address to Contacts. (Only on messages from unknown number)
Forward	To forward a message. Enter a recipient, edit the content of the message as needed > tap Send .
Copy message text	To copy text from a message.
View message details	To view details about a message.
Delete message	To delete a message.

1. Deleting a message thread

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap and hold to select the message thread, tap  **Delete thread**.
 - If you want delete all message threads, tap and hold a message thread and select all, tap  **Delete all threads**.
3. Tap **Delete**.

2. Searching messages

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Search** to search.
3. Enter the search term, messages with matching element appear below the search box .

3. Replying to a message

1. From the Home screen, tap  **Apps** >  **Messages**.
2. Tap the received message > tap **Send message** > enter your message.
3. Tap  **Send**.

Receiving Emergency Alerts Messages

Emergency Alerts service allows you to receive automatic alerts in times of crisis (e.g., earthquake, hurricanes, etc.). Wireless Emergency Alerts (WEA), also known as CMAS, is a part of a national alerting system called IPAWS (Integrated Public Alert and Warning System) that enables emergency management officials to rapidly disseminate the warnings and safety information via text alerts to wireless phones based on the phones' geographic location, The Federal Emergency Management Agency or FEMA is responsible for receiving the alerting information and forwarding the alerts to participating wireless carriers such as Sprint. Such alerts may come from the President of the United States; the National Weather Service, state or county public safety officials. This system is integrated into the same national alerting services that serve television and

radio today. For more information regarding WEA/CMAS please go to: [FEMA website](http://www.fema.gov/emergency/ipaws/projects.shtm#6).
<http://www.fema.gov/emergency/ipaws/projects.shtm#6>

1. Receiving Emergency Alerts Messages

1. From the Home screen, tap  **Apps** >  **Messages** > tap  > tap **Settings** > tap **Wireless alerts**.
2. Tap Emergency alerts message you want to view.
Emergency alert messages are indicated with  Emergency alert icon.
 - If Emergency alert arrives on your phone during a call,  is displayed in the Status bar. If Presidential Emergency Alert, emergency alert icon will flashes. If non-Presidential, Emergency alert icon is static icon.
 - Only the Presidential Emergency Alert icon is displayed under the Time/Date on the unlock/lock screen.
 - If you are on an Emergency alert message screen in the Messaging application, the following options are removed or disabled : **Reply**, **Forward**, and **Call**.
 - If you have power cycled your phone and a Presidential Emergency Alert has not been viewed, the Presidential Emergency Alert icon will continue to flash when the device is powered on again.

Changing Messages Settings

1. From the Home screen, tap  **Apps** >  **Messages**.

2. Tap  **Option** > **Settings**.

1. Group messaging settings

Group messaging	Send an SMS reply to all recipients and get individual replies(mass text)
	Send an MMS reply to all recipients (group MMS)

2. Multimedia message (MMS) settings

Auto-download MMS	Uncheck to download only the heading of multimedia messages. You will need to tap the MMS message heading and manually download each MMS message. You may want to use this feature when connected to a slow data network.
Auto-download MMS when roaming	Uncheck to download only the heading of multimedia messages when roaming. You will need to tap the MMS message heading and manually download each MMS message.

3. Notification settings

Notifications	Enable/disable notification, and set importance, sound and vibrate.
---------------	---

Hear outgoing message sound	Enable/disable outgoing message sounds
-----------------------------	--

4. Emergency Alerts

Amber alerts	Set to receive Amber Emergency Alerts.
Extreme threats	Set to receive Extreme Emergency Alerts.
Severe alerts	Set to receive Severe Emergency Alerts.
Emergency alert history	Go to Emergency alert history screen.
Vibrate	Enable it, phone will vibrate when receive alerts.
Alert reminder sound	Set alert reminder to once, every 2 minutes, every 15 minutes or off.
Show channel 60 broadcasts	Channel 60 is used in India for Operator specific information.

Google

Gmail

1. Opening your Inbox and Reading your Gmail

The inbox is your default Gmail view. All your received emails are delivered to your inbox.

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. Tap the email you want to read.
 - Tap  to star the email.
 - If the sender is a friend in Google Talk, you can see your friend's online status.
 - Tap  **Archive** to archive the message.
 - Tap  **Delete** to delete the message from your inbox.
 - Slid left and right to see the previous or next message in the list.

Replying to or forwarding an email message

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. When reading a message:
 - To reply to the sender, tap .
 - To reply to all message recipients, tap  **Option** > **Reply all**.
 - To forward the message, tap  **Option** > **forward**.

2. Sending a new email

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. From message list, tap  **Create new email**.
3. Enter a name or address in the **To** field. To send the email to several recipients, separate each email address with a comma.
4. Enter a subject in the **Subject** field.
5. Type the message text in the **Compose Mail** field.
 - To attach an image file, Tap  **Attach file**> select the picture you want to attach.
6. Tap  **Send**.
 - To save the message as a draft, tap  **Option** > **Save draft**.

3. Working with Multiple Email Messages

You can archive, delete or label groups of email messages at the same time.

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. From any message list,  check the box next to the email messages you want to work with.

Tap **Archive** to move messages out of your inbox without deleting. Archived emails are assigned the All Mail label.

- Tap **Delete** to delete selected messages.
- Tap **Change Labels** > select the labels that you want to assign > tap **OK**.

4. Switching between Google accounts

If you have set up two or more Google Accounts on your phone, you can switch between them in Gmail. Gmail

displays only one Google Account at a time. The current account is shown at the top right of any message list.

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. From message list, tap  **Option** >  **Manage accounts**.
3. Tap the account that you want to view. You can also tap the account name at the top of the screen to see a list of your accounts.

5. Labeling email messages

You can organize your emails by label. Gmail has preset labels. Or you can create your own labels in Gmail when viewed on a computer. (Note: Custom label colors created on the web are not supported on your phone).

Labeling an email

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. When reading a message, tap  > **Change labels**.
3. Select a label > tap **OK**.

6. Viewing emails by label

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. From message list, tap >  **Option** > **Go to labels**.
3. Tap a label to view matching email messages.

7. Starring/un-starring an email message

You can star an important email to make it easy to find again. Starred emails are assigned the Starred labels.

1. From the Home screen, tap  **Apps** >  **Gmail**.
2. From any message list:
 - Tap  to star a message.
 - Tap  to un-star a message.

Maps

Use Maps to find your current location and get directions. You can search for addresses, landmarks and businesses directly on a street map or satellite image.

NOTE You need an active mobile data or Wi-Fi connection to use Maps. To see your location and get directions, you must turn on location services. From the Home screen, tap  **Apps** >  **Settings** >  **Security & location** <**Location**. Select one or both from **Use wireless networks** or **Use GPS satellites**. Maps may not be available for all locations.

1. Opening and viewing Maps

Viewing your location

1. From the Home screen, tap  **Apps** >  **Maps**.
2. Shows your location on the map and points north for your reference.

Using Maps

1. From the Home screen, tap  **Apps** >  **Maps**.
2. While viewing a map, swipe to any direction on the screen.

2. Viewing location details

Viewing information for a location

1. From the Home screen, tap  **Apps** >  **Maps**.
2. While viewing a map, tap and hold a location, save place, or a search result on the map.

- A balloon opens over the location, with summary information.

3. Tap the balloon to see the address or more information.

Add label to a location

Add labels to places so you can easily find them.

1. While viewing detail information for a location,

- Tap  **LABEL** to add label to the location.
- Tap  **LABELED** > **REMOVE** to remove the label.

Viewing a location in Street view

Street view mode provides a street-level view of the location. Street view may not be available for all areas.

1. From the Home screen, tap  **Apps** >  **Maps**.
2. While viewing detailed information for a location, tap the street view window.

- To view surrounding areas, swipe the screen in any direction.

3. Searching for a location

You can search Google Maps for specific locations, company names, or business types.

1. From the Home screen, tap  **Apps** >  **Maps**.
2. Tap  **Search**.
3. Enter the search criteria. As you type, suggested matches from your contacts, the web, and previously searched items are displayed.

- Tap  to search
 - Tap a suggested search term.
4. The search results are displayed as  markers with letter labels on the map.
- Tap  markers and titles to view more information.
 - Tap  to show the search results as a list > tap each item to see more information.

4. Viewing map layers

Initially, Google Maps opens with a traffic map. You can view additional map layers, such as satellite images and street map. You can also view custom Web created Google Maps.

1. From the Home screen, tap  **Apps** >  **Maps**.
2. Tap  **Option** > **Settings**. Turn **Start maps in satellite view**, then open maps again, satellite view will display.

Layers may change the map entirely or overlay additional information. Tap icons or interactive items to explore different layer types.

5. Getting directions

1. From the Home screen, tap  **Apps** >  **Maps**.
2. Tap  **GO**.
3. Use your current location as the starting point, or enter a location in the **Start point** field.
4. Enter your destination in the **End point** field.
5. Tap  or  or  to select your transportation method > tap **START**.

Calendar

The Calendar application data on your phone syncs with the web-based Google Calendar service. It is also compatible with Microsoft Exchange ActiveSync Calendar.

1. Opening Calendar

1. From the Home screen, tap  **Apps** >  **Calendar**.

Events are color coded to enable you to distinguish between multiple calendars. Events times are shown using your local time zone, which is provided by your active mobile network. When traveling, you may want to set a home time zone in Calendar.

2. Creating an event

Events created on your phone will be synced to Google Calendar or Microsoft Exchange automatically.

1. From the Home screen, tap  **Apps** >  **Calendar**.

2. There are two ways to create an event:

- Tap  **Option** > **New event**.
- In Day, Week, or Month view, tap and hold the screen at the date and/or time you want > **New event**.

3. Enter the name, time, location, description, and optional additional details for your event.

- If you have more than one calendar, choose the calendar to which to add the event.
- In the Guests field, enter email addresses of anyone you want to invite. Separate multiple addresses with commas (.). If your invitees use Google Calendar, they'll receive an invitation in Calendar and by email.

- If the event occurs on a regular basis, tap the Repetition box and choose the reoccurrence information.
 - You can set multiple reminders for an event.
4. Tap **Done**.

3. Viewing calendar and events

Changing calendar view

When you open Calendar, Month view is shown by default. You can also view the Calendar by Agenda, Day, or Week.

1. From the Home screen, tap  **Apps** >  **Calendar**.
2. Tap the icon on the top choose the type of view that you want

Day	Displays a chart of the events of one day, in a table of one-hour rows, ALL-day and multiday events are displayed at the top. Each event is displayed at the corresponding time. Swipe left or right to change dates, and swipe up or down to view earlier or later times.
Week	Displays one week calendar. All-day and multiday events are displayed at the top. Swipe left or right to change weeks, and swipe up or down to view earlier or later times.
Month	Displays a chart of the events of the month. Events are shown as blue bars on each calendar date. Swipe left or right to change months.

Calendar view setting	Hide declined events	Check if you don't want to see events to which you've declined invitations.
	Use home time zone	Displays calendars and event times in your home time zone when traveling.
	Home time zone	If Use home time zone is checked, you can set home time zone.
	Show week number	Check if you want to see week number in Calendar.
	Week starts on	Set week starts on locale default/Saturday/Sunday/Monday
Notifications & Reminders	Notifications	Configure event reminders.
	Sound	Select which ringtone will sound when you receive an event reminder.
	Vibrate	Configure the phone to vibrate whenever you receive an event reminder.
	Default reminder time	Select the default reminder time used when creating new calendar events.
Agenda	A list of your events in chronological order. All-day and multiday events are listed at the start of each day. Days without events are not shown. Flick up or down to view earlier or later events.	
Today	Displays a chart of the events of today.	
Option	You can select New event, Calendars or Settings.	

Viewing event details

- In Day, Week, or Agenda view, tap an event.
- In Month view, tap a day to switch to Day view > tap an event.

4. Editing or deleting an event

1. In event details view, press the event >  **Edit event** to edit the event.
2. Make your changes to the event > tap **Done**.
 - To delete the event, press the event >  **Delete event** > tap **OK**.

5. Synchronizing and displaying calendars

You can select which calendars to show or hide on your phone's Calendar, and which ones to synchronize.

1. From the Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Option** > **Calendars to display**.

All the calendars you've added or subscribed to are displayed. (Calendars for accounts you've configured not to synchronize are not included in the list.)

3. Check the box next to a calendar to change storage and visibility settings.
4. Tap **Calendars to sync**.

6. Changing Calendar settings


1. From the Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Option** > **Settings** > **General settings**.

Play Music

Play music and audio files with Music application.

NOTE You need to copy music files to your microSD card to use the Music application.

1. Viewing your music library

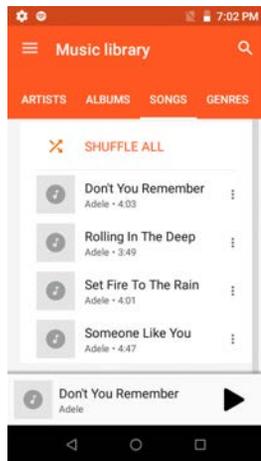

1. From the Home screen, tap **Apps** > **Play Music**
2. You can select library to open at the bottom of the screen.
 - You can view the lists of music in the microSD card.
 - The lists are automatically organized according information contained in the music files. To view each list of music, you can tap the corresponding category; **Artists**, **Albums**, **Songs**, **Playlists** or **Genres**.

Google Play Store

Google Play Store provides direct access to applications and games to download and install on your phone. To access Google Play Store, you must first sign into your Google account using a Wi-Fi or data connection. When you open Google Play Store for the first time, you must read and accept the terms of service to continue.

1. Finding applications

1. Browsing applications

You can browse and sort applications by category.

1. From the Home screen, tap **Apps** > **Play Store**.
2. Tap **GAMES**, **BOOKS & REFERENCE**, **BUSINESS** or **COMICS**, etc. at the left of the Market screen.
 - Scroll to view subcategories and tap one to explore.
3. Tap the subcategory you want.

2. Searching for applications

1. From the Home screen, tap **Apps** > **Play Store**.
2. Tap the search bar at the top of the screen.
3. Enter the name or type of app you're looking for > tap  to search.

3. Viewing details about an application

1. While browsing Google Play Store, or in a list of search results, tap an application to view more details.

Application details screens include a description, ratings, and specific information about the application. The Comments tab includes comments from people who have used the application. You can download and install an application from this screen.

2. Installing applications

1. Installing an application

1. From the Home screen, tap  **Apps** >  **Play Store**
2. Find the application you want to purchase and view the application details.
3. Tap **Install** to download and install the application.
For paid applications, the download button is labeled with the application's price. Tap the price to buy the application. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone.
1. Tap **Accept & download** to begin downloading and installing the app. If you selected a paid app, you will be redirected to the Google Checkout screen to pay for the app before it's downloaded to your phone.

NOTE Be cautious when downloading apps that have access to phone functionality or a significant amount of personal data. You're responsible for the results of using downloaded apps on your phone.

2. Creating a Google Checkout account

You must have a Google Checkout account to purchase items from Google Play Store.

You can set up a Checkout account with your first purchase from Google Play Store.

- In a web browser, go to <http://checkout.google.com> to create a Google Checkout account.

- From the phone, you will be prompted to enter your billing and credit card information when you buy your first application from Google Play Store.

NOTE Once you've purchased something from Google Play Store, the phone remembers your password, so you don't need to enter it the next time. Be sure to secure your phone with a password to prevent unauthorized purchases.

3. Managing your downloads

1. Viewing downloaded applications

1. From the Home screen, tap  **Apps** >  **Play Store**.
2. Tap  **Option** >  **My apps & games**.
In the list of the free and paid applications that opens, you can tap an application to rate it, uninstall it, request a refund, and more.

2. Updating an application

You can update downloaded applications.

1. From the Home screen, tap  **Apps** >  **Play Store**.
2. Tap  **Option** >  **My Apps & games** > tap the application to update.
3. Tap **Update**.
4. Tap the explanation that best matches why you're installing > tap **Open** or press  **Back**.

The application is installed. You can uninstall the application again at any time. If you paid to buy the application, you will not be charged again.

3. Uninstalling an application

You can uninstall applications from Google Play Store. You can also uninstall downloaded applications from the Settings.

1. From the Home screen, tap  **Apps** >  **Settings** > **Apps & notifications**.
2. Tap **Manage apps** > **Installed apps** > tap the application to uninstall.
3. Tap **Uninstall** > **OK**.
4. Tap the explanation that best matches why you're uninstalling > tap **OK**.

The application is uninstalled. You can install the application again at any time. If you paid to buy the application, you will not be charged again.

Web

Chrome

Search for information or browse web pages using the Chrome. To access the internet, you must have an active data or Wi-Fi connection.

1. Opening Chrome

1. From the Home screen, tap  **Apps** >  **Chrome**.

- When you open the Browser, the default homepage is displayed. If you have used the Browser recently, your most recently viewed webpage is displayed.
- The Browser also opens when you select a web link in other applications like email or text messaging.

2. Accessing a webpage or searching the web

1. From the Home screen, tap  **Apps** >  **Chrome**.
2. Tap the URL field on top of the screen.
3. Enter the URL of a webpage or search term and tap .

- As you type, suggestions of web pages and key words will appear on the screen. Tap a suggestion to go directly to that webpage or view search results.

3. Using Browser options

1. Stopping page loading

While webpage is loading, tap  **Back**.

2. the current page

Tap  **Option** >  **Refresh**.

3. Finding the text in the current page

1. While viewing any web pages, tap  **Option** > **Find in page**.

2. Enter the search term.

- As you type, matching characters will be highlighted. Tap \wedge or \vee to scroll to the previous or next matching term.

4. Sharing a webpage

1. While viewing any web pages, tap  **Option** > **Share**.

2. Tap an application to send the URL. The application opens with the URL you've entered.

4. Downloading files

You can download images, files, and applications from web pages. All downloaded files are saved to the microSD card.

1. Tap and hold an image, a link or a file you want to download.

2. Tap the desired action (**Open image in new tab**, **Download image**, **Search Google for this image**, **Share image**).

1. Navigating between webpages

- Press  **Back** to return to the previous web pages.

Or tap  **Option** > **Recent tabs** if you pressed  **Back** by accident.

2. Switching between Browser windows

1. From any web pages, tap **Option** > **History** .
2. Tap the window to view it full screen. You can also tap to close a window.

NOTE You can have up to 8 browser windows open at one time.

5. Using bookmarks

Browser bookmarks are stored shortcuts which allow you to quickly access webpages without having to type in its full address.

1. Bookmarking a webpage

1. While viewing webpages, tap **Option** > tap **Save to bookmarks**.
2. Edit the name or location if needed > **OK**.

2. Opening a bookmark

1. When viewing any webpages, tap **Option** > **Bookmarks**.
2. Tap a bookmark to open it.
 - If you prefer to open the webpages in a new window, tap and hold the bookmark and tap **Open in new tab**.

3. Editing a bookmark

1. From any webpages, tap **Option** > **Bookmarks**.
2. Tap on the right of the bookmark to edit > **Edit**.
3. Edit the name and/or location > **OK**.

4. Deleting a bookmark

1. From any webpages, tap **Option** > **Bookmarks**.
2. Tap on the right of the bookmark to delete > **Delete** > **OK**.

6. Browser settings

Customize your browser settings to optimize your browsing experience.

1. From the Home screen, tap **Apps** > **Browser**.
2. Tap **Option** > **Settings**.

Basics settings	Search engine	You can choose Google, Yahoo, Bing Etc to browse the web
	Autofill and payments	Fill out web forms with a single touch, Set up Addresses and Cards.
	Save passwords	Save your passwords for some webpages that require you to sign in.
	Notifications	Change notifications settings about Chrome.
Privacy	Navigation error suggestions	Show suggestions when a web address does not resolve or a connection cannot be made.
	Search and site suggestions	Use prediction services to suggest search terms and websites.
	Security reports	Automatically send some system information and page content to Google to help detect dangerous apps and sites

Privacy	Safe Browsing	Protect you and your device from dangerous sites.
	Use page predictions	Preload pages for faster loading and offline reading.
	Usage and crash reports	Automatically send usage statistics and crash reports to Google when enable.
	“Do Not Track”	Enable it means that a request will be included with your browsing traffic
	Touch to Search	Learn about topics on websites without leaving the page.
	Physical Web	Discover web pages sent by nearby objects.
	Clear browsing data	Tap to clear browsing history/cookies and site data/cached images and files/saved passwords/etc.
Advanced settings	Accessibility	Text scaling ,Zoom on double-tap and Minimum font size
	Site settings	Set for individual websites.
	Data Saver	When this feature is turned on, Chrome will use Google servers to compress pages you visit before downloading them.
	About Chrome	Application version, operating

YouTube

YouTube is Google’s online video streaming service for viewing, discovering, and sharing videos.

1. Opening and signing into YouTube

1. Signing into YouTube

You can discover and watch YouTube videos without a YouTube account, but if you want to take advantage of many YouTube features, you must sign into your YouTube account.

1. From the Home screen, tap  **Apps** > 

YouTube.

2. Tap  **Option** > **Sign in**

The first time you use a YouTube feature that requires an account, you’re prompted to sign in. Create a new account or enter your YouTube sign in information if you already have an account. For more information about YouTube accounts, visit YouTube on the web.

2. Finding videos

1. Browsing videos by category

1. From the Home screen, tap  **Apps** >  **YouTube.**

2. Tap YouTube Trending

3. Tap a category in the scrolling list.

- Tap the current time filter setting at the top of the category screen to change the time period and reduce the number of videos listed.
- Tap **Home, Trending, Subscriptions, or Library.**

2. Searching for videos

1. From the Home screen, tap  **Apps** >  **YouTube.**

2. Tap **Search**.
3. Enter the search criteria > tap to search.
4. Scroll through the search results and tap a video to watch it.

3. Watching videos

1. From the Home screen, tap **Apps** > **YouTube**.
2. Tap a video to begin playback.
 - Tap the video to pause or resume playback.
 - Tap **Info**, **Related videos** or **Comments** to learn more about the video.
 - Rotate your phone to watch the video in full-screen view. You can also double-tap the video to toggle full-screen view on and off.

Add to	Watch later	Bookmark the video to watch it later.
	Favorites	Add the video to your Favorites.
	New playlist	Add your new playlist.
Share	Share the video via Bluetooth , Gmail , etc.	

4. Uploading videos

1. To shoot and upload a new video
 1. From the Home screen, tap **Apps** > **YouTube**.
 2. Tap . The Camera will open in video mode.
 3. Tap to start recording > tap to stop recording.
 4. Enter a title for the video and more details > tap **Upload**.

2. To upload an existing video

1. From the Home screen, tap **Apps** > **YouTube**.
2. Tap > tap the video you want to upload.
4. Enter the title for the video and more details > tap **Upload**.

5. Sharing videos

1. From the Home screen, tap **Apps** > **YouTube**.
2. Tap a video to play.
3. Tap **Share**.
4. Tap the application you want to use to share the video.

6. YouTube settings

You can change the following settings for YouTube on your phone.

1. From the Home screen, tap **Apps** > **YouTube**.
2. Tap **Option** > **Settings**.

General settings	Limit mobile data usage	To set limit mobile data usage when data saver/144p/240p/360p/480p/720p/no quality limit.
	Double-tap to seek	Specify double tap to seek time.
	Uploads	Specify network preferences for uploads.
	Location	Set region
	Restricted mode	Restricted mode hides videos that may contain inappropriate content flagged by users and other signals.

Autoplay	Autoplay next video	When you finish a video, another plays automatically.
Watch on TV	Watch on TV	Link your phone with TV, then you can watch video on TV.
History & privacy	Clear watch history	Clear this account's watch history from all devices.
	Clear search history	Remove previous YouTube video search results.
	Blocked contacts	Set to block some results when you search for videos.
Billing & payments	Restore purchase verification	Restore account verification for YouTube purchases.
Notifications	Mobile notifications	Set whether notify me when subscriptions/recommended videos/activity on my channel/activity on my comments/activity on other channels/product updates.
Captions	Captions	Set the language, text size or caption style.
About	Help	Open the YouTube Help Center in your phone's Browser.
	Send Feedback	Open a YouTube feedback form in your phone's Browser.
	YouTube Terms of Service	Display the YouTube Terms of Service.
	Google Privacy Policy	Display mobile privacy policy.

	Open source licenses	License details for open source software
	Application version	The YouTube application version number installed on your phone.

Wi-Fi

1. Turning Wi-Fi on and connecting to a wireless network

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Network & Internet** > **Wi-Fi**.
3. Select the **Wi-Fi** check box to turn Wi-Fi on.
4. The network names and security settings of detected Wi-Fi networks are displayed.
5. Tap a Wi-Fi network to connect.
 - If you selected a network that is secured, enter the security key and then tap **Connect**. Depending on the network type and security settings, you may also need to enter more information or choose a security certificate.

2. Connecting to a Wi-Fi network with EAP-TLS security

You may need to install a network certificate to your phone before you can connect to a Wi-Fi network with EAP-TLS authentication protocol.

1. Save the certificate file to the root folder of the microSD card.
2. From the Home screen, tap  **Apps** >  **Settings**.
3. Tap  **Security & location** > Encryption & credentials > **Install from SD card**.
4. Select the network certificate needed to connect to the EAP-TLS network.
5. After the certificate is installed, follow the steps in the previous section to connect to the Wi-Fi network.

3. Checking wireless network status

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Network & Internet** > **Wi-Fi**.
3. Tap the wireless network that the phone is currently connected to.

A message box is then displayed showing the Wi-Fi network name, status, speed, signal strength, and more.

4. Connecting to another Wi-Fi network

1. From the Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Network & Internet** > **Wi-Fi**.
3. Detected Wi-Fi networks are displayed in the Wi-Fi networks section. To manually scan for available Wi-Fi networks, on the Wi-Fi settings screen, turn off and turn on Wi-Fi again.
 - To set advanced settings, on the Wi-Fi settings screen, tap **Wi-Fi preferences** > **Advanced**.
4. Tap another Wi-Fi network to connect to it.

Downloads

Images, files and other items you download in Browser, Gmail, is stored on your phone. You can view, manage or delete what you have downloaded.

1. Opening Downloads

1. From the Home screen, tap  **Apps** >  **Files** > **Downloads**.
2. Tap an item you want to view it.
 - Long press the item you want to delete and then tap  **Delete**.
 - Tap  to switch to list view, tap  to switch to grid view.

2. Viewing a file

1. From the Home screen, tap  **Apps** >  **Files** > **Downloads**.
2. Tap the file you want to open.
 - Turn your phone left or right to view the file in upright (portrait) or sideways (landscape) orientation.

3. Working with files

1. From the Home screen, tap  **Apps** >  **Files** > **Downloads**.
2. Tap the file you want to manage.
3. Share or view info
 - Tap  to share the selected file.
 - Tap  to view info of the selected file

Bluetooth

Using Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 30 feet. The most common Bluetooth devices are headphones, hands-free car kits, and portable devices, including laptops and cell phones.

1. Turning Bluetooth on or off

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices** >  **Bluetooth**.
2. Check or uncheck Bluetooth to turn it on or off.

2. Changing the phone's Bluetooth name

The phone name identifies your phone to other devices.

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. Tap  **Bluetooth**.
3. If Bluetooth isn't turned on, check Bluetooth to turn it on.
4. Tap **Device name** > Enter the name for your phone in the dialog box > **Rename**.

3. Pairing your phone with a Bluetooth device

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. If Bluetooth isn't turned on, check Bluetooth to turn it on.

3. Tap  **Bluetooth** > tap  **Pair new device**. A list of nearby Bluetooth devices is displayed.
4. Tap the ID of the other device to pair them.

4. Connecting to a Bluetooth device

Once paired, your phone will automatically connect whenever it detects a paired Bluetooth device. You can also manually connect Bluetooth devices as follows:

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. If Bluetooth isn't turned on, check Bluetooth to turn it on.
3. Tap  **Bluetooth** > tap  **Pair new device**.
4. When the phone and the device are connected, the device is displayed as connected in the list.

Disconnecting or Un-pairing from a Bluetooth Device

1. Disconnecting a Bluetooth device

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. Tap  **Bluetooth**.
3. In the Bluetooth devices section, tap  to disconnect.
4. Tap **Forget**.

2. Un-pairing from a Bluetooth device

You can make your phone forget its pairing connection with another Bluetooth device.

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. Tap  **Bluetooth**.
3. In the Bluetooth devices section, tap  to un-pair.
4. Tap **Forget**.

Connecting to a Bluetooth

Headset

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. Tap  **Bluetooth**.
3. If Bluetooth isn't turned on, check Bluetooth to turn it on.
4. Tap  **Pair new device**. Your phone will start to scan for Bluetooth devices within range.
5. When you see the name of your headset displayed in the Bluetooth devices section, tap the name. Your phone then automatically tries to pair with the Bluetooth device.
6. If automatic pairing fails, enter the passcode supplied with your headset.

1. Reconnecting a headset

1. Put the Bluetooth device in pairing mode.
2. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
3. Tap  **Bluetooth**.
4. If Bluetooth isn't turned on, check Bluetooth to turn it on.
5. Tap the device's name in the Bluetooth devices section.

6. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

Sending and Receiving Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or laptop computer. You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Contacts
- Audio files

To send files, your phone must have a microSD card installed.

NOTE The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. Your phone and the other device are then paired, and you will not need to exchange passcodes to transfer information in the future.

1. On your phone, open the application that contains the item you want to send.
2. Follow the steps for the type of the application, select **Share** or **Send** in the menu. Then select **Bluetooth**.
3. If you are prompted to turn on Bluetooth, tap **Turn on**.

4. Tap the name of the receiving device.
5. On the receiving device, accept the file.

1. Receiving information from another device

Your device is capable of receiving a wide variety of file types with Bluetooth, including photos, music tracks, and documents such as PDFs.

To receive files from another device, your phone must have a microSD card installed.

1. From the Home screen, tap  **Apps** >  **Settings** >  **Connected devices**.
2. Tap  **Bluetooth**.
3. If Bluetooth isn't turned on, check Bluetooth to turn it on.
4. On the sending device, send one or more files to your phone.
5. If a Bluetooth authorization request is displayed on your phone, enter the same passcode on both your phone and the other device, or confirm the auto-generated passcode.
6. When your phone receives a file transfer request notification, slide down the notifications panel, and then tap **Accept**.
7. When the transfer is complete, a notification is displayed. To open the file immediately, slide down the notifications panel, and tap the notification.

Entertainment

Camera/Camcorder

You can take pictures and shoot videos with Camera/Camcorder. Photos and videos captured with the camera will be stored on the internal memory.

1. Opening Camera

- From the Home screen, tap  **Apps** >  **Camera**.
- Or, when in Camcorder mode, tap  to choose  change to camera.

2. Camera settings

When in Camera mode, Camera settings are displayed on screen. Before taking the photo, you can adjust your camera settings or leave the controls in automatic mode.

1. From the Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Option**. The settings open over the screen.

Tap the setting you want to change.

General settings	Picture size	3M Pixels, 2M Pixels, 1M Pixels, VGA, QVGA
	Picture quality	Super fine, Fine, Normal
	Countdown timer	1second/2 seconds/.../5 seconds/10 seconds/.../60 seconds
	Continuous shot	Turn on/off continuous shot
	Exposure	+2, +1, 0, -1, -2

GPS location	Off / On	Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location.
White balance	 Auto,  Incandescent,  Daylight,  Fluorescent,  Cloudy.	
Storage	Phone/SD Card	To set the storage location

3. Tap screen to close the settings menus.

3. Taking a picture

1. From the Home screen, tap  **Apps** >  **Camera**.
2. Frame your subject on screen.
 - Tap  . The camera brings the image into focus. When the image is in focus, the camera takes a picture. The picture you just took is briefly previewed full-screen, and then is displayed as a thumbnail in the lower left corner. Tap the thumbnail to view, share, or work with your pictures in Gallery.

4. Opening Camcorder

- When you're in Camera mode, tap  to choose  change to camcorder.

Camcorder.

1. Camcorder settings

When in Camcorder mode, Camcorder settings are displayed on screen. Before recording, you can

adjust your camcorder settings or leave them in automatic mode.

Tap  **Option**. The settings open over the screen.

- Tap **screen** to close the settings menus
Tap the setting you want to change.

Flash	Turn on/off flash when recording videos.
Video quality	HD 720P, SD 480P, VGA, CIF, QVGA, QCIF
Video duration	30 seconds(MMS), 10 minutes, 30 minutes, no limit
GPS location	Turn on/off GPS location
Storage	To set the storage location to Phone/SD Card
White balance	 Auto,  Incandescent,  Daylight,  Fluorescent,  Cloudy.

NOTE Depending on the selected video quality, not all video quality and video encoder options may be available.

2. Recording videos

1. From the Home screen, tap  **Apps** >  **Camera** > tap  > choose .
2. Frame the scene where you want to start recording.
3. Tap  to start recording.
4. Tap  to stop recording.

An image from your most recent video is displayed as a thumbnail at the lower left corner. Tap the thumbnail to view, share, or work with your videos in Gallery.

Sound Recorder

1. Opening Sound Recorder.


1. From the Home screen, tap  **Apps** >  **Sound Recorder**.
2. Tap  to start recording a voice clip.
3. Tap  to stop recording.
 - To save the voice clip, enter voice record name > tap  **Done**.
 - To discard the voice clip, tap **Discard**.
 - Tap  to listen to the recording.

Tools

Clock

1. Opening the Clock

1. From the Home screen, tap  **Apps** >  **Clock**.
 - The Clock application opens and displays the date, time and other useful information.
 - Tap **Set alarm** to set alarm.

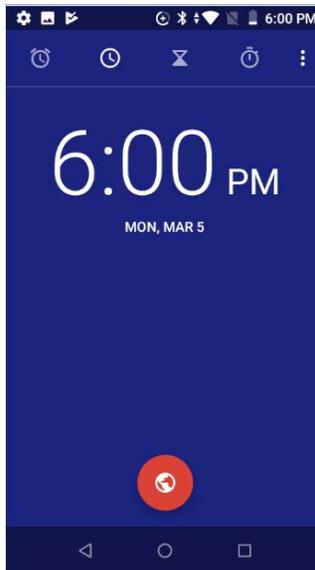

2. Managing Alarms

1. Adding a new alarm
 1. From the Home screen, tap  **Apps** >  **Clock**.
 2. Tap  **Set alarm** >  **Add alarm**.
 3. To change the alarm time, tap the time number. Then select AM/PM > **OK**.
 4. Check the checkbox, '**Turn alarm on**'.

5. Edit **Turn alarm on**, **Time**, **Repeat**, **Ringtone**, **Vibrate** and **Label** > **Ok**.

2. Editing an alarm

1. From the Home screen, tap  **Apps** >  **Clock**.
2. Tap  > Tap an existing alarm.
3. Turn the alarm on or off by checking or unchecking the checkbox, '**Turn alarm on**'.
4. Edit **Time**, **Repeat**, **Ringtone**, **Vibrate** and **Label** > **Done**. Or tap **Delete** to remove the alarm > **OK**.

3. Changing alarm settings

1. From the Home screen, tap  **Apps** >  **Clock**.
2. Tap  > tap  **Option** > **Settings**.

Silence after	Set how long alarm will silence when ringing
Snooze length	Set how long Clock waits before playing an alarm again.
Alarm volume	Set the volume of alarms.
Gradually increase volume	Set gradually increase volume time.
Volume buttons	Set the side button behavior for alarms.
Start week on	Set start week on Sunday, Saturday or Monday

4. Stopping an alarm

1. When the alarm sounds, tap **Dismiss** to stop the alarm.
 - Tap **Snooze** to repeat the alarm after a specified length of time.

Calculator

Using Calculator

1. From the Home screen, tap  **Apps** >  **Calculator**.
2. Enter numbers and arithmetic operators.
 - Slide to left > **Advanced panel**.
 - Tap and hold the Calculator's display to open a text editing menu. You can cut, copy, and select text for use in Calculator or other Applications.
 - Tap  > **History** > **Clear** to delete everything in the display.

Settings

Settings on Your Phone

Control and customize phone settings on the Settings screen.

1. From the Home screen, tap  **Apps** >  **Settings**.

▼ **Network & internet**

Wi-Fi/ Wi-Fi settings	Wi-Fi On / Off. Set up and manage Wi-Fi networks. For details about working with these settings, see “Wi-Fi”.
Mobile network	The settings include Mobile data enable, Data roaming, Data usage, Access Point Names and Enhanced 4G LTE Mode. You can also select a network operator.
Data usage	This setting you can see mobile data and wi-fi data statistics, and you can turn on or turn off the data.
Hotspot & tethering	Set up Wi-Fi hotspot, USB tethering and Bluetooth tethering
VPN	Set up and manage Virtual Private Networks (VPNs).
Wi-Fi calling	Wi-Fi calling On / Off. Set up calling preference and update E911 address.
Airplane mode	Airplane mode On / Off. Check to turn off all the phone’s radios that transmit voice or data.

Connected devices

Bluetooth/ Bluetooth settings	Bluetooth On / Off. For details about working with these settings, see “Bluetooth”.
Cast	Connect to a nearby device to cast
Printing	You can add print service and manage print services.
USB	Select USB transferring files mode.

Apps & notifications

Manage apps	Manage and remove installed applications.
Notifications	Manage app notifications on for all apps

Battery

Tap Battery you can see how much the apps using the battery and the all battery.

Display

Brightness level	Adjusting the brightness of the screen.
Night light	Set turns on schedule, status and intensity.

Adaptive brightness	Optimize brightness level for available light when enable it.
Wallpaper	You can set wallpaper.
Sleep	Adjust the delay before the screen automatically turns off.
Auto-rotate screen	Automatically switch the orientation of the screen as you turn the phone sideways or even upside down.
Font size	You can set the size of font.
Display size	You can set the display size.
Screen saver	Manage and set screen saver.
Ambient display	Set when to show ambient display

🔊 Sound

Volume	Set the volume of ringtones that sound when you receive a phone call or notification, media (music, videos, and so on), and alarms.
Also vibrate for calls	Vibrate when the ringtone ring out.
Do Not Disturb preferences	Manage do not disturb preferences rule.

Phone ringtone	Select the ringtone to sound when you receive a phone call.
Default notification sound	Select the ringtone to sound when you receive a notification.
Default alarm sound	Select the ringtone to sound when alarm coming.
Dial pad tones	Check to play tones when using dial pad.
Screen locking sounds	Check to play sounds when locking and unlocking the screen.
Touch sound	Check to play sound when touching the panel.
Vibrate on tap	When touch the panel will vibrate.
Emergency alerts	Select the Emergency tone and other alert settings.

☰ Storage

Storage manager, you can see the SD card and the phone space.

Internal shared storage	See phone storage space and manage storage
SD card	See content on SD card
Unmount SD card	Unmout the SD card so you can safely remove it.

Mount SD card	Add SD card.
---------------	--------------

Security & Location

Google Play Protect	Google Play Protect regularly checks your apps and device for harmful behavior. You'll be notified of any security risks
Find My Device	This function helps you locate this device remotely. It also helps you keep your data safe, if the device is lost.
Security update	Check for system update.
Screen lock	Configure your phone to require a pattern, PIN, or password to unlock your screen.
Lock screen preferences	Manage notification on the lock screen.
Smart Lock	Set and manage smart lock.
Location	Let apps use GPS on your phone to pinpoint your location.
Show passwords	Show password characters as you enter them.
Device admin apps	Manage device admin apps.
Encryption & credentials	You can encrypt phone and manage credentials.
Trust agents	Manage trust agents.

Screen pinning	You can use screen pinning to keep the current screen in view until you unpin when turn on this setting.
Apps with usage access	Manage apps' permit usage access.

Users & accounts

Accounts	You can add an account for Corporate, Email, Facebook, Google, and Twitter.
Emergency information	Adding medical information and emergency contacts can help first responders in an emergency.
Automatically sync data	Let apps refresh data automatically when turn on.

Accessibility

Text-to-speech output	You can set the Text-to-speech output.
Font size	You can set the size of font.
Display size	You can set the display size.
Magnification	Magnify with triple-tap when this setting is on.
Color correction	Manage color correction mode.
Color inversion	Color on phone will inverse when turn on it.

Large mouse pointer	Turn on / off
Click after pointer stops moving	Turn on / off. You can set delay before click.
Power button ends call	When the icon is on, you can press power on/off icon ends call.
Auto-rotate screen	Let the phone auto rotate .
Touch & hold delay	Set the time of touch &hold short, medium, long.
Mono audio	Combine channels when playing audio.
Captions	Set the language, text size or caption style.
Hide contrast text	Turn on / off.

Google

You can manage Google services and preferences.


System

Language & input	Select the language and keyboard to use for the text on your phone.
Gestures	Set gestures, like press the power button twice to quickly open camera.
Date & time	Manage data & time, time zone, time format and date format.

Backup	Back up app data, Wi-Fi passwords, and other settings to Google servers.
Reset options	You can reset Wi-Fi, mobile & Bluetooth, reset app preferences and erase all data on phone.
About phone	Display legal, version and status information. And you can update OEM software.

Firmware Upgrade

1. Make sure the target device is power on with a fully charged battery.
2. Tap to go to **Settings > System > About phone** and tap **Wireless update**.

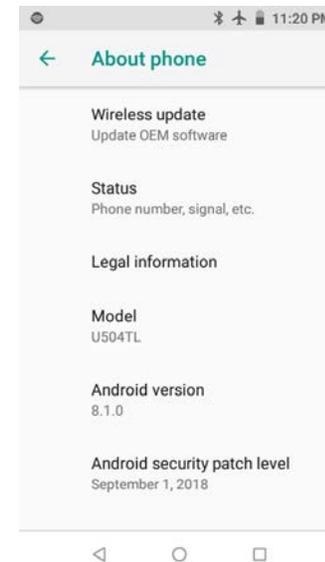

3. Upgrade according to tips.
4. During the period of update, the target device will automatically reboot for TWO times. Please don't operate the device until the update is completed.

Safety and use

Please read before proceeding

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE BOX. DO NOT REMOVE THE BATTERY PACK WHEN THE PHONE IS CHARGING. YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.

1. Privacy restrictions

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

2. Disclaimers

ANY WEATHER, STOCK, OR OTHER INFORMATION, DATA, OR DOCUMENTATION (“ACCESSED INFORMATION”) ARE PROVIDED “AS IS” AND WITHOUT ANY WARRANTY OR ANY TECHNICAL SUPPORT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNIMAX COMMUNICATIONS MOBILE AND ITS AFFILIATES expressly disclaim any and all representations and warranties, arising by law or

otherwise, related to the Accessed Information, including without limitation any express or implied representation or warranty of merchantability, fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, or usefulness. Without limiting the foregoing, it is further understood that UNIMAX COMMUNICATIONS Mobile and its Affiliates are not responsible for any use of the Accessed Information or the results arising from such use and that you use such information at your own risk.

Limitation of damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL UNIMAX COMMUNICATIONS MOBILE OR ITS AFFILIATES BE LIABLE TO YOU, ANY USER, OR THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, ARISING IN CONTRACT, TORT, OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS, REGARDLESS OF THE FORESEEABILITY THEREOF OR WHETHER UNIMAX COMMUNICATIONS MOBILE OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AND IN NO EVENT SHALL THE TOTAL LIABILITY OF UNIMAX COMMUNICATIONS MOBILE OR ITS AFFILIATES EXCEED THE AMOUNT RECEIVED FROM YOU, REGARDLESS OF THE LEGAL THEORY UNDER WHICH THE CAUSE OF ACTION IS

BROUGHT. THE FOREGOING DOES NOT AFFECT ANY STATUTORY RIGHTS WHICH MAY NOT BE DISCLAIMED.

Important health information and safety precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire and damage to the equipment, observe the following precautions.

1. Electrical safety

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

2. Safety precautions for proper grounding installation



Connecting to improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet

which is properly installed and grounded in accordance with all local codes and ordinances.

3. Safety precautions for power supply unit

1. Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

This product should be operated only with the following designated power supply unit(s).

Travel charge: Input: 100-240V, 50/60Hz,
0.3A Output: 5V, 2000mA

2. Handle battery packs carefully

This product contains a Lithium-ion polymer or Lithium-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 140°F (60°C).



Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 140°F (60°C), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used

batteries according to the local regulations or reference guide supplied with your product.



3. Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the

battery. Consult the doctor immediately if the battery is swallowed.

- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-172 5-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-172 5-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
- Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

4. Safety precautions for direct sunlight

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 140°F (60°C), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

5. Prevention of hearing loss

 Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

6. Safety in aircraft

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your rf on your phone by switching to Airplane Mode.

7. Environment restrictions

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas

could cause an explosion or fire resulting in bodily injury or even death.

8. Explosive atmospheres

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

9. Road safety

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

10. Safety precautions for RF exposure

- Avoid using your phone near metal structures (for example, the steel frame of a building).

- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

11. Interference with medical equipment functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

12. Non-ionizing radiation

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radioactive performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the

human body be allowed to come too close to the antenna during operation of the equipment. Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

13. Electrical safety

Accessories

- Use only approved accessories.
- Do not connect with incompatible products or accessories.
- Take care not to touch or allow metal objects, such as coins or key rings, to contact or short circuit the battery terminals.

Connection to a car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and damaged products

- Do not attempt to disassemble the phone or its accessory.
- Only qualified personnel must service or repair the phone or its accessory.

14. General precautions

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Avoid applying excessive pressure to the device
Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.

Device getting warm after prolonged use
When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

Heed service markings
Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself.

Service needed on components inside the device should be done by an authorized service technician or provider.

Protect your phone

- Always treat your phone and its accessories with care and keep them in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -4°F (-20°C) and maximum 122°F (50°C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down. Damage requiring service
Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen into the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

Avoid hot areas

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Avoid wet areas

Never use the product in a wet location.

Avoid using your device after a dramatic change in temperature

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

Avoid pushing objects into product

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

Air bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

Mounting accessories

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

Avoid unstable mounting

Do not place the product with an unstable base.

Use product with approved equipment

This product should be used only with personal computers and options identified as suitable for use with your equipment.

Adjust the volume

Turn down the volume before using headphones or other audio devices.

Cleaning

Unplug the product from the wall outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen. Small children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Repetitive motion injuries

To minimize the risk of RSI, when Texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Loud noise

This phone is capable of producing loud noises which may damage your hearing.

Emergency calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Regulatory agency identifications

1. FCC Regulations:

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.56 W/kg and when worn on the body, as described in this user guide, is 0.84 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: P46-U504TL.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of

other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

HEARING AID COMPATIBILITY HAC FOR WIRELESS TELECOMMUNICATIONS DEVICES

THIS PHONE HAS A HAC RATING OF M4/T3 WHAT IS HEARING AID COMPATIBILITY?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C63.19. There are two sets of ANSI standards with ratings from one to four (four being the best rating): an “M” rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a “T” rating that enables the phone to be used with hearing aids operating in the tele-coil mode thus reducing unwanted background noise.

HOW WILL I KNOW WHICH WIRELESS PHONES ARE HEARING AID COMPATIBLE?

The Hearing Aid Compatibility rating is displayed on the wireless phone box.

A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an "M3" or "M4" rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (tele-coil mode) if it has a "T3" or "T4" rating.

HOW WILL I KNOW IF MY HEARING AID WILL WORK WITH A PARTICULAR DIGITAL WIRELESS PHONE?

You'll want to try a number of wireless phones so that you can decide which works the best with your hearing aids. You may also want to talk with your hearing aid professional about the extent to which your hearing aids are immune to interference, if they have wireless phone shielding, and whether your hearing aid has a HAC ratio