

LG 440G User Guide



- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



Contents

Contents	2	Groups	22
Your Phone	5	Speed Dial	22
Phone Components	5	SIM Management	23
Rear view	7	Own Number	23
Getting Started	8	My Business Card	23
Installing the SIM card and battery	8	Messages	24
Charging your phone	10	Create Message	24
General Functions	12	Inbox	27
Before you begin	12	Drafts	28
Making a Call	12	Outbox	28
Answering a Call	13	Message Settings	29
Adjusting the Volume	13	Message Alert	29
Entering Text	14	Save To	29
In-Call Menu	16	Signature	29
During a Call	16	Text Message	29
Making a Second Call	16	Multimedia Message	30
Swapping Between Two Calls	16	Vicemail	30
Answering an Incoming Call	16	Music	31
Rejecting an Incoming Call	17	Music	31
Using the Speakerphone	17	Playing Music	31
Phone Menus	18	Adding Music To Your Handset	32
Contacts	22	Additional Music Services	32
Contact List	22	Recent Calls	33
New Contact	22	Games & Apps	33

 
 
Email	34	Settings	50
Sending an email using your new account	34	Audio & Ringtones	50
Retrieving your email	34	Ringtone	50
Message folders	34	Message Tone	50
Changing your email settings	35	Alert Tone	50
Camera	36	Keypad Tone	51
Take Photo	36	Multimedia	51
Record Video	37	Call	51
Camera Album	38	Phone Settings	51
My Folder	39	Languages	51
Audio	39	Set Hotkeys	51
Pictures	39	Flight Mode	51
Video	39	Security	52
Other Files	39	Reset Settings	52
File Manager	40	Display	53
Tools	41	Wallpapers	53
Voice Command	41	Fonts	53
Alarm Clock	43	Clocks & Calendar	53
Calendar	43	Brightness	53
Notepad	44	Backlight Timer	53
Calculator	45	Menu Styles	53
Tasks	45	Call	53
Stopwatch	46	Send My Number	53
Tip Calculator	46	Answer Mode	54
Unit Converter	46	Senior Mode	54
Voice Recorder	47	Time & Cost	54
Browser	48	Accessibility	54
		Bluetooth	54
		Turn On/Off	55
		Search New Device	55

Contents

My Devices	55
My Bluetooth Info.	55
Memory	56
Used Space	56
Applications.	57
Messages	57
Browser.	57
Voice Command	58
TTS (Text-to Speech)	59
Phone Information.	59
Accessories	60
For Your Safety.	61



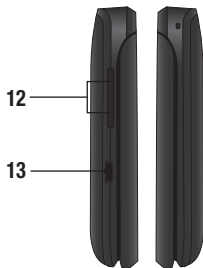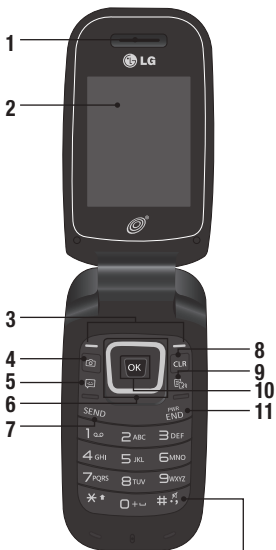

Your Phone

Phone Components



Press and hold to activate/deactivate Vibrating Mode.

Your Phone

- 1. Earpiece:** Lets you hear the caller during a call.
- 2. Main LCD:** Displays phone status icons, menu items, web items, web information, pictures and more, in full color.
- 3. Left Soft Key/Right Soft Key:** Each of these keys perform the functions indicated by the text on the display immediately above them.
- 4. Camera Key:** Lets you activate the Camera and take pictures.
- 5. Message Hot Key:** Trigger this key to directly go to **Create Message**.
- 6. Navigation Keys**
Home screen functions:
 -  Games & Apps
 -  Contacts
 -  Alarm Clock
 -  Music

- In a menu: Navigates between menus.
- 7. Send Key:** Press this key in standby mode to quickly access the most recent missed, dialed, and received calls. Also dials a call when you enter a number.
- 8. Clear/Back Key:** Allows you to return to the previous screen. Press and hold to activate the Voice Command function.
- 9. TTS Mode Key:** Lets you turn the TTS mode on/off.
- 10. OK Key:** Select options and menus.
- 11. End/Power Key:** Allows you to power the phone on or off, end calls, or return to standby mode.
- 12. Volume Keys:** Allows you to control the Master Volume while in standby mode and the earpiece volume during a call.
- 13. Charger/USB Port:** Allows you to connect a charger or other supported accessories.

Rear view



Getting Started

Installing the SIM card and battery

1. Remove the back cover

Place your thumb at the top part of the back cover and slide it downwards to remove it.



2. Remove the battery

Hold the top edge of the phone and use the fingernail cutout near the bottom of the battery to lift the battery from the phone.



Warning

Do not remove the battery when the phone is turned on; this can damage the phone.

3. Install the SIM card

Slide the SIM card into the SIM card slot (as shown below). Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



 
4. Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it snaps into place.



5. Install the back cover


Align the back cover on the battery compartment and slide it upwards until it locks into place.

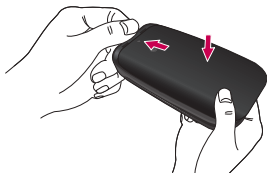

Getting Started

Battery Information and Care

 Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

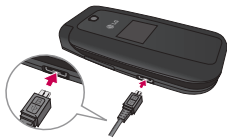

Charging your phone

Locate the Charger/USB Port on the left side of your phone. Insert the charger connector to the phone (the 'B' side of the connector has to be facing up when connecting to the phone) and then plug into the wall socket. Your LG 440G will need to be charged until the Full Battery message appears on the screen.

Important!



 








 
You must insert the battery before charging.











Warning

Use of unauthorized accessories could damage your phone and void your warranty.

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

ICON/ INDICATOR	DESCRIPTION
	Network signal strength (number of bars will vary)
	No network signal
	Low Battery
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent All profile in use
	EDGE network available
	Bluetooth is active
	3G network available
	The browser is active





ICON/ INDICATOR	DESCRIPTION
	Vibrating Mode On
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Battery Charging
	Flight Mode On
	Camera in use
	Camcorder in use
	Camcorder timer

General Functions



Before you begin

Remember that you can select the menu icons from Menu screen using the number keys if you set the Menu Style as **List Style**. If you set the Menu Style as **Icon Style**, you can only use the Navigation Keys to select the menu icons.



Making a Call

- 1 Make sure your phone is powered on.
- 2 Enter a phone number including the area code. To edit a number on the display screen, simply press the Clear/Back Key  to erase one digit at a time.
 - ▶ Press and hold the Clear/Back Key  to erase the entire number.
- 3 Press the Send Key  to call the number.
- 4 To end the call, press the End/Power Key .


Making a Call with the Send Key

- 1 Press the Send Key  to display the most recent missed, dialed and received calls will be displayed.
- 2 Highlight the desired number by using the Navigation Keys.
- 3 Press the Send Key .

Making International Calls


- 1 Press and hold the  key and the international access character '+' will appear.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the Send Key  to call the number.



Ending a Call

To end a call, press the End/Power Key .

Making a Call from the Contacts

You can store frequently called names and phone numbers in the SIM card as well as in your Contacts List.




You can dial a number by simply highlighting a name in the Contacts List and pressing the Send Key .

- 1 Press the down Navigation Key  to access the Contact List.
- 2 Highlight the Contact and press the Send Key .

Answering a Call

When you receive a call, the phone displays a notification on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name, if stored in your Contacts) is displayed.

- 1 Press the Send Key  or the Left Soft Key  **Accept** to answer an incoming call.

If the Answer Mode has been set as **Any Key** ( **Menu** > **Settings** >  **Call** >  **Answer Mode**), any key

press will answer a call, except for the End/Power Key , the Right Soft Key , or the Volume Keys.

- 2 End the call by pressing the End/Power Key .

Note

You can answer a call while using other functions or features.

Adjusting the Volume

Use the Volume Keys during a call to adjust the earpiece volume.

While in standby mode, you can adjust the Master Volume using the Volume Keys.

General Functions

Vibrating Mode (Quick)

Vibrating Mode can be activated by pressing and holding down the  key.


Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Contacts, writing a message, or scheduling events in the calendar all require text to be entered.

Changing the Text Input Mode

Change the text input mode by pressing  when in a text entry field.


You can check the current text input mode in the upper right corner of the screen.

The following text input modes are available on the phone.



ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter.

123 Mode (Numbers Mode)




Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.

Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, press the  key. Use the Navigation Keys to highlight the desired symbol and press the OK Key .

Using the ABC Mode

Use the alphanumeric keypad to enter your text.

- 1 Press the key labeled with the required letter.
- 2 To insert a space, press the  key once. To delete letters, press the Clear/Back Key . Press and hold down the Clear/Back Key  to erase all of the entered text.

Note

Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	., '@?!- : / 1	., '@?!- : / 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4


Key	Characters in the Order Displayed	
	Upper Case	Lower Case
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

In-Call Menu

During a Call

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the Left Soft Key  **Options**.



Making a Second Call

You can select a number you wish to dial from the Contacts to make a second call.


- 1 Press the Left Soft Key  **Options**, then select **Contacts**.
- 2 Highlight the contact, then press the Send Key  to make a second call.


Swapping Between Two Calls

Once the second call has been dialed (or answered), you can switch between the calls by using one of the following three methods:


- ▶ Press the Send Key .
- ▶ Press the Left Soft Key  **Options** and then select **Swap Calls**.
- ▶ Press the up or down Navigation Keys.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the Send Key . The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.


If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the Send Key .

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the End/Power Key .

Muting the Microphone

You can mute the microphone during a call by pressing the Right Soft Key  **Mute**.

The handset can be unmuted by pressing the Right Soft Key  **Unmute**. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the OK Key .

Spk. On. The loudspeaker is automatically deactivated when you end the call.

Warning

Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.

Phone Menus

1. Prepaid

[Single Tank -TF / Net 10]

- 1.1 Add Airtime
- 1.2 Buy Airtime
- 1.3 My Phone Number
- 1.4 My Airtime Info
- 1.5 Airtime Display
- 1.6 Serial Number
- 1.7 SIM Number
- 1.8 Code Entry Mode

[Straight Talk - Single Tank]

- 1.1 Add Airtime
- 1.2 My Phone Number
- 1.3 Service End Date
- 1.4 Serial Number
- 1.5 SIM Number
- 1.6 Code Entry Mode

[Straight Talk - Multi Tank]

- 1.1 Add Airtime
- 1.2 My Phone Number
- 1.3 My Balance Info
- 1.4 Serial Number
- 1.5 SIM Number
- 1.6 Code Entry Mode

2. Contacts

- 2.1 Contact List
- 2.2 New Contact
- 2.3 Groups
- 2.4 Speed Dial
- 2.5 SIM Management
- 2.6 Own Number
- 2.7 My Business Card

3. Messages

- 3.1 Create Message
- 3.2 Inbox
- 3.3 Drafts
- 3.4 Outbox
- 3.5 Message Settings

4. Music

- 4.1 Now Playing**
- 4.2 All Songs**
- 4.3 Playlists**
- 4.4 Artists**
- 4.5 Albums**
- 4.6 Genres**
- 4.7 Shuffle Songs**

5. Recent Calls

- 5.1 All Calls**
- 5.2 Missed Calls**
- 5.3 Dialed Calls**
- 5.4 Received Calls**

6. Games & Apps

- 6.1 Buy Games**
- 6.2 [Preloaded applications]**

7. Email

- 7.1 Write Email**
- 7.2 [Accounts]**

8. Camera

- 8.1 Take Photo**
- 8.2 Record Video**
- 8.3 Camera Album**

9. My Folder

- 9.1 Audio**
- 9.2 Pictures**
- 9.3 Video**
- 9.4 Other Files**
- 9.5 File Manager**

10. Tools

- 10.1 Voice Command**
- 10.2 Alarm Clock**
- 10.3 Calendar**
- 10.4 Notepad**
- 10.5 Calculator**
- 10.6 Tasks**
- 10.7 Stopwatch**
- 10.8 Tip Calculator**
- 10.9 Unit Converter**
- 10.10 Voice Recorder**
- 10.11 SIM App.**

Phone Menus

11. Browser

12. Settings

12.1 Audio & Ringtones

- 12.1.1 Ringtone
- 12.1.2 Message Tone
- 12.1.3 Alert Tone
- 12.1.4 Keypad Tone
- 12.1.5 Multimedia
- 12.1.6 Call

12.2 Phone Settings

- 12.2.1 Languages
- 12.2.2 Set Hotkeys
- 12.2.3 Flight Mode
- 12.2.4 Security
- 12.2.5 Reset Settings

12.3 Display

- 12.3.1 Wallpapers
- 12.3.2 Fonts
- 12.3.3 Clocks & Calendar
- 12.3.4 Brightness
- 12.3.5 Backlight Timer
- 12.3.6 Menu Styles

12.4 Call

- 12.4.1 Send My Number
- 12.4.2 Answer Mode
- 12.4.3 Senior Mode
- 12.4.4 Time & Cost
- 12.4.5 Accessibility

12.5 Bluetooth

- 12.5.1 Turn On(Turn Off)
- 12.5.2 Search New Device
- 12.5.3 My Devices
- 12.5.4 My Bluetooth Info

12.6 Memory

12.6.1 Used Space

12.7 Applications

12.7.1 Messages

12.7.2 Browser

12.7.3 Voice Command

12.7.4 TTS

12.8 Phone Information

Contacts

Contact List

This menu allows you to save and manage contact address information. The Contact List allows you to add a new address or search saved contact addresses by name.

To access Contact List, from the standby screen, press the Left Soft Key  **Menu**, **Contacts** and  **Contact List**.

New Contact

This menu allows you to add a new contact to the Contact List. You can enter contact address information including name, phone numbers, email addresses, group information items, memos, ring tones, and a contact Picture ID.

To access New Contact, from the standby screen, press the Left Soft Key  **Menu**, **Contacts** and  **New Contact**.

Groups

This menu allows you to manage group information. You can also configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address within that group is received and there is no ring tone configured for the specific contact address.

To access Groups, from the standby screen, press the Left Soft Key  **Menu**, **Contacts** and  **Groups**.

Speed Dial

This menu allows you to assign a frequently-called contact to the Speed Dial List. You can select a number from 2 to 9 as a speed dial.

To access Speed Dial List, from the standby screen, press the Left Soft Key  **Menu**, **Contacts** and  **Speed Dial**.

SIM Management

This menu allows you to copy information from your SIM card to your handset and vice versa. If a name is duplicated during the copying operation, the information is also duplicated. You can also delete information from the SIM card.

To access SIM Management, from the standby screen, press the Left Soft Key  **Menu, Contacts** and  **SIM Management.**



Own Number

This displays your phone numbers stored in the SIM card.

To access Own Number, from the standby screen, press the Left Soft Key  **Menu, Contacts** and  **Own Number.**

My Business Card

This displays your business card stored in the handset. You can also delete or edit it.

To access My Business Card, from the standby screen, press the Left Soft Key  **Menu, Contacts** and  **My Business Card.**


Messages

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Voicemail as well as the network's service messages.

Create Message

- 1 From the standby screen, press the Left Soft Key  **Menu**.
- 2 Select **Messages**.
- 3 Press  **Create Message**.

OR

You can simply press the Message Hot Key  from the standby screen.


Note

If you insert a Picture, Audio, or Video file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

Editing a message

The following options are available when editing a message.

Using Insert

While entering text, press the Right Soft Key  **Insert**. The following options are available.

- ▶ **Symbol:** You can insert various symbols into your message. Pressing the Left Soft Key  and Right Soft Key  scrolls through the pages.
- ▶ **Picture:** You can select a picture to insert by using the Navigation Keys. You can preview the selected picture by pressing the Right Soft Key  **View**.
- ▶ **Audio:** You can insert an audio file from your saved audio files.
- ▶ **Video:** You can insert a video clip from your saved video clips.
- ▶ **Take New Picture:** You can take and insert a picture in your message.

► **Record New Audio:** You can record a new audio clip by pressing the OK Key  **Record**. Press the Left Soft Key  **Options** before you begin recording to set the options (below). After recording a new audio clip, you can delete it by pressing the Left Soft Key  **Discard**.

- **Quality:** Set the audio's quality to **Fine**, **Normal**, or **Economy**.
- **Record New Video:** You can record a new video by pressing the OK Key  **Record**. When finished recording, press the OK Key  **Insert**.
- **Slide:** Allows you to insert another slide before or after the current slide.
- **Template**
 - **Text:** Allows you to easily insert frequently used sentences in the text message.

- **Multimedia:** Preset multimedia templates can be created ( **Menu** > **Messages** >  **Message Settings** >  **Multimedia Message** >  **Multimedia Templates** >  **New**).
- **Signature:** Allows you to insert your own created signature.
- **More:** Allows you to insert vCard, vCalendar, vNote, vTask or Contact.

Note

vCard, vCalendar, vNote and vTask are created by the Contacts, Calendar, Notepad, and Tasks functions, respectively. Go to the Tools and Contacts sections in this Manual for more detailed information.

Messages

Using Options

While entering text, press the Left Soft Key

 **Options.**


- **Text Entry Mode:** Sets the text input mode. For more details, refer to Entering Text (page 14).
- **Text Entry Settings**
 - **Text Entry Language:** Allows you to set the text entry language to English or Spanish.
 - **T9 Word Candidate List:** Displays the word candidates as you type.
 - **T9 Next Word Prediction:** Allows the phone to predict the next word when typing in T9 mode.
 - **T9 Dictionary:** Allows you to add, delete, reset, and modify words.

Save to Drafts: Saves the message to Drafts.

Cancel Message: Allows you to exit the text input mode without saving your message.

Sending a Message


After completing a message, press the OK Key  **Send To** to select a recipient.

- Enter the recipient(s). For more options, press the Left Soft Key  **Options.** In this menu, you can choose from the following options:
 - **Enter Number:** Allows you to enter the phone number using the keypad.
 - **Enter Email:** Allows you to enter an email address instead of a phone number.
 - **Insert Symbol:** Allows you to enter symbols.
 - **Caller Groups:** Displays Contacts Groups.
 - **Recent Messages:** Choose a Contact from Recent Messages.
 - **Recent Calls:** Choose a Contact from Recent Calls.
 - **Delivery Options:** Allows you to set the options for Add Cc and Add Bcc.
 - **Save to Drafts:** Saves the selected message to Drafts.

- **Cancel Message:** Allows you to cancel the message.

Inbox

You will be alerted when you receive a message. New messages are stored in the Inbox. In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Inbox menu. To reach the Inbox, from the standby screen, press the Left Soft Key  **Menu** > **Messages** >  **Inbox**.

When you press the Right Soft Key  **Reply**, you can reply to the sender of the message.

While viewing the Inbox, press the Left Soft Key  **Options** for the following options:


- ▶ **Forward:** You can forward the selected message to another person.
 - ▶ **Copy to Phone/Copy to SIM:** You can copy to Phone or SIM depending on where the text message is stored.
 - ▶ **Move to Phone/Move to SIM:** You can move to Phone or SIM depending on where the text message is stored.
 - ▶ **Select Multiple:** You can select multiple messages.
 - ▶ **Sort By:** Allows you to sort the messages by date, sender, read/unread, or subject.
 - ▶ **Message Details:** You can view the following information about received messages: message Type, Subject, From, and message Time.
 - ▶ **Delete All Read Msg:** You can delete all read messages.
- ▶ **Add to Contact:** You can save the sender's phone number in the Contact List.
 - ▶ **Delete:** You can delete the selected message.


Messages

Drafts

Allows you to view and edit the messages saved as drafts. To access drafts, from the standby screen, press the Left Soft Key


 **Menu, Messages,** and  **Drafts.**

When you press the Right Soft Key  **Delete**, it allows you to delete the message.

While viewing the Drafts, press the Left Soft Key  **Options** for the following options:

- ▶ **Select Multiple:** Allows you to select multiple messages to delete.
- ▶ **Message Details:** Allows you to view the details of the message.

Outbox

Outbox is the storage place for recently sent messages. When you press the Send Key , you can call the recipient of the selected message.

If the message is not sent from the Outbox, you will receive a sound alert along with a Message Sending Failure notice on the screen. Another attempt will be made to send the failed message and after two

unsuccessful attempts, the message will no longer be sent automatically.

To access the Outbox, from the standby screen, press the Left Soft Key  **Menu, Messages,** and  **Outbox.**

The following options are available for the Outbox folder by pressing the Left Soft Key

 **Options:**

- ▶ **Delete:** Deletes the selected message.
- ▶ **Edit:** Allows you to edit the selected message.
- ▶ **Select Multiple:** Allows you to select multiple messages to delete.
- ▶ **Sort By:** Allows you to sort the messages by date and recipient.
- ▶ **Message Detail:** Allows you to view the details of the message.

Press the Right Soft Key  **Forward** to send the selected message to another.

Message Settings

To access and configure your Message Settings, from the standby screen, press the Left Soft Key  **Menu, Messages**, and  **Message Settings**.

Message Alert

Allows you to set the Sounds, Volume, Alert Type, and Alert Interval.

Save To

Allows you to choose whether to save to the SIM Card or the Phone.

Signature

Allows you to create, edit, and delete your signature, which can be configured to be sent out with your outgoing messages.

Text Message

Allows you to set preferences for text messages.

The following options are available:

- ▶ **Text Templates:** Predefined messages that can quickly be sent. Press the Left Soft Key  **Options** to access the following available options:
 - **Send:** Allows you to send the selected template via Message.
 - **Delete:** Allows you to delete the selected template message.
 - **Edit:** Allows you to edit the selected template message.
 - **Delete All:** Deletes all messages in the folder.
 - **Cancel:** Cancel the template you were creating.

Messages

- ▶ **Msg Center No.:** Allows you to view and edit the phone number for the Message Center. Do not edit unless instructed to do so by your service provider.
- ▶ **Email Gateway:** Allows you to view and edit the Email Gateway. Do not edit unless instructed to do so by your service provider.
- ▶ **Insert Signature:** Allows you to turn the Signature feature on or off.

Multimedia Message

Allows you to set your preferences for multimedia messages.

The following options are available:

- ▶ **Multimedia Templates:** Allows you to add, edit, and delete multimedia templates. Press the Right Soft Key  **New** to create a new multimedia template. Press the Left Soft Key  **Options** while creating a message to access the following available options:
 - **Text Entry Mode:** Sets the text input mode. For more details, refer to Entering Text(page 14).

- **Text Entry Settings**

- **Text Entry Language:** Allows you to set the text entry language to English or Spanish.
- **T9 Word Candidate List:** Displays the word candidates as you type.
- **T9 Next Word Prediction:** Allows the phone to predict the next word when typing in T9 mode.
- **T9 Dictionary:** Allows you to add, delete, reset, and modify words.
- **Cancel Message:** Allows you to exit the text input mode without saving your message.

Voicemail

This menu allows you to set the Voicemail Center Number if this feature is supported. Please check with [your service provider](#) for details of their service in order to configure the handset correctly.

Music

Music

You can access Music by pressing the Left Soft Key  **Menu** and selecting **Music**.

The following options are available:

- ▶ **All Songs:** Allows you to view all the songs in your music library.
- ▶ **Playlists:** Allows you to create your own playlists.
- ▶ **Artists:** Shows the list of artists of all the songs in your music library, and shows all the songs by a chosen artist.
- ▶ **Albums:** Shows the list of albums of all the songs in your music library, and shows all the songs on a chosen album.
- ▶ **Genres:** Shows the list of genres of all the songs in your music library, and shows all songs of a specific genre.
- ▶ **Shuffle Songs:** Allows you to play all the songs in your music library in random order.

Tip!



The music player plays formats such as MP3, AAC, AAC+, and WMA.

Note

Music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.

Playing Music

To listen to music that you have in your phone, follow these quick easy steps:

- 1 Press the Left Soft Key  **Menu** to open the Main Menu.
 - 2 Select **Music** and then choose from **Now Playing, All Songs, Playlists, Artists, Albums** and **Genres** or **Shuffle Songs** to shuffle your collection.
- Press the OK Key  **Play/Pause** to play and pause a selected song. While playing, press the up or down Navigation Keys to change the volume and the left or right Navigation Keys to go to the previous or next song.

Music

- While playing music, press the Left Soft Key  **Options** to access other functions while music is playing.

Adding Music To Your Handset

Music files can be added to your handset by using one or more of the following methods:

- Download music and ringtones over the network directly to your device.
- From your PC using music subscription services.

Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.


Additional charges may apply when downloading music, ringtones, etc.

Additional Music Services

There may be other music applications preloaded or available for your phone that allow you to:

- Identify the name, artist, and album to a song from a song sample.
- Listen to the latest Classic, jazz, pop, rock anywhere you go.
- View the latest music videos.
- View music news and information.
- Cut custom-made ringtones from the favorite parts of your favorite songs, etc.

Recent Calls

This menu allows you to see the list of recently received calls. To access Recent Calls, from the standby screen, press the Left Soft Key  **Menu** and **Recent Calls**.

You can access the following menus:
All Calls, Missed Calls, Dialed Calls, and Received Calls.

Games & Apps





This menu allows you to download or access the various games.

To access the Games, from the standby screen, press the Left Soft Key  **Menu** and **Games & Apps**.

Email

Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press the Left Soft Key  **Menu**, select **Email** and choose the account you want to use.
- 2 Press the Left Soft Key  **Options** and choose  **Write Email** to write an email.
- 3 Enter the recipient's address in the **To** field. Then use the down Navigation Key to access the Subject and Messages fields.
- 4 Enter your message using the keypad and press the OK Key  **Send** to send the email.

Retrieving your email

- 1 Press the Left Soft Key  **Menu**, and select **Email**.
- 2 Select the account you want to use.
- 3 Press the Left Soft Key  **Options** and select **Refresh** to connect to your email account and retrieve your new messages.

Note

You can manually retrieve your email only if you set to Push Off.

Message folders

Open **Email**, press the Left Soft Key  **Options**, and select  **Mailbox**. The list of folders will be displayed.

Write Email - Create your new message.

Inbox - All the e-mails you receive are placed into your Inbox. From here you can reply, forward and more.

Drafts - If you don't have time to finish writing a e-mail, you can save what you have written so far in here.

Outbox - This is a temporary storage folder while e-mail are being sent or stores the messages that are failed to sent.

Sent - Copies of all the e-mail you send are kept into your Sent folder.

Trash - All the e-mail you remove are placed into your Trash.

Changing your email settings

1 Press the Left Soft Key  **Menu**,
choose **Email** > Left Soft Key 
Options >  **Mailbox** > 
Options >  **Settings**.

2 Set any of the following options.

Accounts - You can edit e-mail account settings.

Schedule - Allows you to configure the email schedule.

Notification - Choose whether or not to be alerted to new emails.

Default Account - Choose which account to compose e-mail by default.

Signature - Create an email signature and switch this feature on.






Camera

To access Camera from the standby screen, press the Left Soft Key  **Menu** and select **Camera**.

Take Photo

Using the camera you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message.

The following options will appear (as icons) at the bottom of the screen.

- ▶  **Album:** Allows you to see saved image and video files.
- ▶  **Video:** Allows you to switch to Camcorder mode.
- ▶  **Capture:** Allows you to capture the image.
- ▶  **Zoom:** Allows you to set the zoom level.
- ▶  **Brightness:** Allows you to set the Brightness.

Press the Right Soft Key  **Settings** for the following options:

Preview Tab

- ▶ **Image Size:** The resolution of the image can be captured in 1280*960, 640*480, 320*240.
- ▶ **Color Effects:** Allows you to choose from Off, Mono, Sepia, or Negative.
- ▶ **White Balance:** Set the White Balance as Auto, Daylight, Cloudy, Illuminate, or Indoors.
- ▶ **Night Mode:** Set Night Mode to On or Off.
- ▶ **Timer:** Timer can be set to Off, 3 Seconds, 5 Seconds, or 10 Seconds.
- ▶ **Shot Mode**
 - **Normal Mode:** This set as normal camera mode.
 - **Continuous Shot:** This is great for taking photos of moving objects or at sporting events. The continuous shot is only available in QVGA(320x240) mode and can be set to 3, 6, or 9 shots per event.

- ▶ **Image Quality:** The quality of the captured image can be set to Super Fine, Fine, or Normal.

Others Tab


- ▶ **Shutter Tones:** You can choose from Tone 1, Tone 2, Tone 3, or Off.
- ▶ **Reset Settings:** Allows you to set the Camera to the default settings.

Using Zoom

In Camera mode, you can zoom in and out by using the up and down Volume Keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
1280*960	Not Available
640*480	Level 1 ~ Level 10
320*240	Level 1 ~ Level 10

Record Video

Allows you to record a video clip with your phone. Before starting to record, press the Left Soft Key  **Settings** to configure your settings.

The following options will appear (as icons) at the bottom of the screen.

- ▶  **Album:** Allows you to see saved image and video files.
- ▶  **Photo:** Allows you to switch to the Camera function so you to take a picture.
- ▶  **Record:** Allows you to begin recording the video.
- ▶  **Zoom:** Allows you to set the zoom level.
- ▶  **Brightness:** Allows you to set the Brightness.

Camera

Press the Left Soft Key  **Settings** for the following options:

Preview Tab

- ▶ **Color Effects:** Allows you to choose from Off, Mono, Sepia, or Negative.
- ▶ **White Balance:** Set the White Balance as Auto, Daylight, Cloudy, Illuminate, or Indoors.
- ▶ **Video Quality:** Allows you to set video quality to Super Fine, Fine, or Normal.
- ▶ **Duration:** Set the recording duration to General Mode or MMS Video mode.

Others Tab

- ▶ **Recording Tones:** Allows you set Recording Tones to On or Off.
- ▶ **Reset settings:** Allows you to set the Camcorder to the default settings.

Note

In Video mode, you can adjust the zoom scale by using the up and down Volume Keys. The zoom scale ranges from Level 1 to Level 9.

Camera Album

Allows you to view the pictures and videos that are captured with the camera. When a file is highlighted, the following options are available when you press the Left Soft Key

Options:

For image file:

Use As/Send Via/Print Via Bluetooth/Delete/Rename/Select Multiple/File Information.

For video file:

Send Via/Delete/Rename/Select Multiple/File Information

My Folder

Audio

To access Audio, from the standby screen, press the Left Soft Key  **Menu, My Folder**, and  **Audio**.

- ▶ **Buy Ringtones** Allows you to buy ring tones.
- ▶ **Record Voice:** Allows you to record voice notes.
- ▶ Saved audio files are displayed in the list.

Pictures

To access Picture, from the standby screen, press the Left Soft Key  **Menu, My Folder**, and  **Pictures**.

- ▶ **Buy Graphics:** Connects to Color Graphics download site.
- ▶ **Take Photo:** Allows you to take a picture.
- ▶ The picture files saved on your phone are displayed.

Video

To access Video, from the standby screen, press the Left Soft Key  **Menu, My Folder**, and  **Video**.

- ▶ **Record Video:** Allows you to record a video.
- ▶ The video files saved on your phone are displayed.

Note

Please note that DRM can restrict some functions, such as sending and editing.

Other Files

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are saved in this folder.

To access Other Files, from the standby screen, press the Left Soft Key  **Menu, My Folder**, and  **Other Files**.

My Folder

The following options are available by pressing the Left Soft Key  **Options:**

- ▶ **Send Via:** Send the selected file via Message, Email, or Bluetooth.
- ▶ **Delete:** Allows you to delete the selected file.
- ▶ **Move:** Allows you to move the selected file to another folder.
- ▶ **Copy:** Allows you to copy the selected file to another folder.
- ▶ **Rename:** Allows you to edit the name of the selected file.
- ▶ **Select Multiple:** Allows you to select multiple files at once to perform various functions.
- ▶ **Sort By:** Allows you to sort the files by Name, Date, and Type.
- ▶ **File Information:** Allows you to view information about the selected file or used memory space on your phone.



File Manager

This function allows you to view the content in your internal phone memory.

To access File Manager, from the standby screen, press the Left Soft Key  **Menu**, **My Folder**, and  **File Manager**.

Tools

Voice Command

Voice Command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the Voice Command function, there are four possible commands, Call <Name or Number>, Listen Voicemail, Missed Calls, and Time & Date. To activate the Voice Command function, hold down the Clear/Back Key  while the phone is in standby mode or press the Left Soft Key .

Menu, Tools, and  **Voice Command**.

1 Call <Name or Number>: This function is activated only when the user says the command "Call" followed by the name stored in the address book or say the phone number. Please note that interfering noise might cause a problem displaying candidates. Additionally, the user has the option to select a number type at the end, such as "mobile", "home", or "work".

2 Listen Voicemail: This command is activated when the user says "Listen Voicemail". The user will then be automatically connected to voicemail.

3 Missed Calls: This command is activated when the user says the words "Missed Calls". The mobile phone presents the missed call list.

• Follow-up Commands Available

- **Yes:** Make the phone call.
- **No:** Moves to the next result.
- **Cancel:** Go back to the main Voice Command menu.
- **Exit:** Terminate Voice Command.
- **Next:** Moves to the next result.

4 Time & Date: This command is activated when the user says "Time & Date". The phone displays the current local time and date.

Tools

Voice Command Options

When the Voice Command option is activated, you can press the Left Soft Key



Options for the following options:

- **Mode**

- **Speed:** Voice Command is abbreviated.
- **Normal:** Voice Command is played normally with prompts.

- **Best Match**

- **1 Match:** The most likely match will be displayed when finding a number from the address book.
- **4 Matches:** The four most likely matched names will be displayed when finding a name from the address book.

- **Sensitivity**


- **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.
- **Medium:** Operation of the voice recognition engine is normally affected by user's voice command and surrounding sound.

- **Low:** Operation of the voice recognition engine is strongly affected by user's voice command and surrounding sound.

- **Spk. On Mode**

- **Automatic On:** When this option is selected, the speakerphone is turned on and the sound is loud enough so you can hear the output when the phone is away from the ear, at a distance
- **Off:** When this option is selected, the speakerphone is turned off and the sound is quieter and cannot be heard when the phone is away from the ear, at a distance

Alarm Clock

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval, and alarm tone. If there is no alarm setting, press the Left Soft Key  **New** to add a new alarm.

To access Alarm Clock, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Alarm Clock**.

Alarm Options

- ▶ **Time:** Input your desired alarm time by specifying the hour and minutes.
You can also choose a predefined amount of time (15 Minutes Later, 30 Minutes Later, 45 Minutes Later, 1 Hour Later, Off).
- ▶ **Repeat:** Select the desired repeat mode (Once, Daily, Mon ~ Fri, Sat ~ Sun, Select Weekday).
- ▶ **Alarm Tone:** Press the OK Key  **List** to access the list of available Alarm Tones.
- ▶ **Volume:** Set the volume of the alarm by pressing the up and down Volume Keys.

- ▶ **Type:** Select the Ring Alert Type between Ring, Vibrate, Ring & Vibrate and Vibrate after Ring.
- ▶ **Memo:** Enter an alarm name.
- ▶ **Snooze interval:** Select the snooze interval between 5 Minutes, 15 Minutes, 30 Minutes, 45 Minutes, 1 Hour and Off.





Press the Left Soft Key  **Save** to save your new Alarm.

Calendar

When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates saved schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item.

Tools

The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
	Weekly
	Daily
	Annually
	Monthly

To access Calendar, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Calendar**.


The following options are available when a Calendar event is selected from the Calendar menu.

- ▶ **Search:** Allows you to search the saved schedule(s).
- ▶ **Set Holiday:** Allows you to set specific dates to display as Holidays on your calendar.
- ▶ **View All:** Allows you to view all saved schedules.
- ▶ **Week View:** Allows you to view the calendar by week.

- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Selective Delete:** Allows you to delete Old Schedules or All Schedules selectively.
- ▶ **Settings:** Allows you to set various calendar settings.

Notepad



You can create up to a maximum of 30 memos.

To access Notepad, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Notepad**.

- 1 Press the Left Soft Key  **New** to create a new memo.
- 2 Input the memo and press the OK Key  **Save** to save.


Calculator



The Calculator function allows you to calculate simple mathematical equations.


To access Calculator, from the standby screen, press the Left Soft Key  **Menu, Tools,** and  **Calculator.**

Tasks

This feature allows you to save and manage a task.

To access Tasks, from the standby screen, press the Left Soft Key  **Menu, Tools,** and  **Tasks.**

- 1 To add a new task item, press the Left Soft Key  **New.**
- 2 Input the Due Date, Note, Priority, and Status information for the new Task.
- 3 Press the Left Soft Key  **Save** to save the Task item.

The following options are available in the Task list by pressing the Left Soft Key  **Options:**







- ▶ **Mark 'Complete':** Allows you to change the status of the selected task as Completed.
- ▶ **Edit:** Allows you to edit a saved task.
- ▶ **Delete:** Deletes the selected task.
- ▶ **Selective Delete:** Allows you to delete All Completed/All Past Tasks selectively.
- ▶ **Send Task Via:** Enables the selected task to be sent via Text Message, Multimedia Message, Email or Bluetooth.
- ▶ **Select Multiple:** Allows you to select multiple Tasks.
- ▶ **View Calendar:** Allows you to view the Calendar.

Tools

Stopwatch



This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 laps) and the total time can also be displayed.

To access Stopwatch, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Stopwatch**.

- 1 To start timing, press the OK Key  **Start**. The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).
- 2 During the timing, you can record an individual lap time by pressing the Right Soft Key  **Lap**. Up to 20 lap times can be recorded.
- 3 You can stop or restart timing by pressing the OK Key  again.
- 4 To reset the stop watch, press the OK Key  **Stop** to stop the time, then press the Right Soft Key  **Reset**. If you've recorded laps, press the Right Soft Key  **Reset**.

Tip Calculator

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

To access Tip Calculator, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Tip Calculator**.

Unit Converter

This function allows you to convert units of measurement.

There are 6 types of units that can be converted: Area, Length, Weight, Temperature, Volume, and Velocity.

To access Unit Converter, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Unit Converter**.


Voice Recorder

Allows you to record an audio clip to your phone. The recorded audio file is saved automatically in the Audio menu.

To access Record Voice, from the standby screen, press the Left Soft Key  **Menu**, **Tools**, and  **Voice Recorder**.

The following options are available when you press the Left Soft Key  **Options**:

- ▶ **Record Mode:** Sets the recording mode to either MMS Mode or General Mode.
- ▶ **Quality:** Allows you to set the quality of an audio clip. You can set it to Fine, Normal, or Economy.

When you press the Right Soft Key  **Gallery**, it will take you to the Audio gallery.

Browser

Browser is one of the services provided by your network operator and it gives you access to all the cool things you can do with your wireless phone.


Note

Check the availability of services, pricing, and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account.

Launch the Browser

To launch the browser from the standby screen, press the Right Soft Key 

Browser or press the Left Soft Key  **Menu** and select the **Browser** using the Navigation Keys.

To exit the browser at any time, press the End/Power Key  .

Using the Browser

Once you are connected to the Internet, the following menu options are available when you press the Left Soft Key  **Options**:

▶ **Zoom**: Allows you to zoom in/out for better look.

Note

You can also adjust the Browser text and image size by pressing the up and down Volume Keys to zoom in and out.

- ▶ **Home**: Directs you to the homepage.
- ▶ **Enter URL**: Allows you to enter URL you desire to visit.
- ▶ **Send Link**: Allows you to send link
- ▶ **Bookmarks**: You can add or save the current page to Bookmarks or view the list saved under Bookmarks.
- ▶ **Navigation Mode**: Allows you to select Back, Forward, and Refresh.
- ▶ **Search Text**: Allows you to search the text.

- ▶ **Recent Pages:** Allows you to view your history of recently viewed web sites.
- ▶ **Settings:** Allows you to set options for web pages and appearance.

Menus for the Browser

You can surf the Internet using either the phone keys or the Browser menu.

Using the Navigation Keys



When surfing the Internet, the Navigation Keys function similarly from when the phone is on standby mode.

Settings

Audio & Ringtones

This menu allows you to configure the audio and ringtone settings for your phone.

To access Audio & Ringtones, from the standby screen, press the Left Soft Key

 **Menu, Settings,** and  **Audio & Ringtones.**

Ringtone

- ▶ **Sounds:** Allows you to set a sound as the ringtone for your phone.
- ▶ **Volume:** Allows you to control your Ringtone volume.
- ▶ **Alert Type:** Supports 3 ring alert types: Ring, Ring and Vibration, and Ring after Vibration.
- ▶ **Increasing Ringtone:** Allows you to enable or disable the Increasing Ringtone function, which is played when you receive an incoming call.

Note

Full length music tracks cannot be set as either ringtones or message tones.

Message Tone

- ▶ **Sounds:** Allows you to set a sound as your message tone.
- ▶ **Volume:** Allows you to control your Message Tone volume.
- ▶ **Alert Type:** Supports 4 message alert types: Silent, Vibrate, Ring Only, Ring & Vibrate.
- ▶ **Alert Interval:** Allows you to set the Message Alert Interval.

Alert Tone

- ▶ **Sounds:** Allows you to select a set of alert tones. Supports 2 alert tone types: Alert Tone 1 and Alert Tone 2.
- ▶ **Volume:** This menu allows you to control your Alert Tone volume.
- ▶ **Alert Type:** You can select to turn Alert Tones to Ring or Silent.

Keypad Tone

This menu option allows you to select a tone that the phone sounds when a key is pressed on the dialpad. You can select an option from Beep and Voice and set the volume.

Multimedia



This menu allows you to control your Multimedia volume.

Call

This menu allows you to control your Call volume.

Phone Settings

This menu allows you to configure the Phone Settings. To access Phone Settings, from the standby screen, press the Left Soft Key

 **Menu, Settings,** and  **Phone Settings.**

Languages

Allows you to change the language for the display text on your phone. This change will also affect the Language Input mode.

Set Hotkeys

Allows you to change the preferences on the Hotkeys that are currently assigned for your Navigation Keys (when in standby mode).

Flight Mode

This allows you to only use the phone's features that do not require the use of the wireless network, excluding emergency calls, when you are in an airplane or in places where the wireless network is prohibited. If you set the flight mode on, the flight mode icon will be displayed on the screen instead of the network signal icon.

Settings

- ▶ **On:** You cannot make (or receive) calls, excluding emergency calls, or use other features that require network coverage.
- ▶ **Off:** You can deactivate the flight mode to access the network.

Security

Various codes and passwords are used to protect the features and settings of your phone.

- ▶ **Phone Lock:** You can use a security code to avoid unauthorized use of the phone.
If you set the Phone Lock to **When Power On**, the phone will request a security code whenever you switch the phone on. If you set the Phone Lock to **Lock Phone Now**, your phone will lock immediately.
- ▶ **Change Codes:** The Change Codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one.

Reset Settings

This function allows you to restore factory settings. To do this, you need the security code.

- ▶ **Master Reset:** Restores the phone settings (e.g.: Audio, Display, Language, Bluetooth Settings) to default values.
- ▶ **Master Clear:** Deletes downloaded/user created contents (e.g.: images, videos) from the phone.
- **Phone**
 - Deletes all downloaded/user created images and audios from the phone memory.
 - Deletes personal information stored in the phone memory (e.g.: Contacts, Messages, Tasks, Alarm, Calendar Schedules).
 - Restores the settings stored in the phone memory to the default values.

Display

This menu allows you to configure your Display settings.

To access Display, from the standby screen, press the Left Soft Key  **Menu**, **Settings**, and  **Display**.

Wallpapers

This menu allows you to set a picture or color as your background.

Fonts

You can configure the font size and color of the font that your phone uses.

Clocks & Calendar

This feature allows you to select a Clock or Calendar to display on the standby screen.

Brightness

You can set the brightness of the display screen.

Backlight Timer

Use this to set the duration of the display backlight.

Menu Styles

You can set the main menu style to Icon or List view.

Call

This menu allows you to configure your Call settings.

To access Call, from the standby screen, press the Left Soft Key  **Menu**, **Settings**, and  **Call**.





Send My Number

This network service allows you to set your phone number to be displayed or hidden from the person you are calling. You can select Set by Network if you prefer to have different settings for different service providers.

Settings

Answer Mode

This allows you to determine how to answer the phone.

- ▶ **Any Key:** Allows you to answer an incoming call by pressing any key, except the End/Power Key , Volume Keys, or the Right Soft Key  **Silent.**
- ▶ **Send Key Only:** Allows you to only answer an incoming call by pressing the Send Key  or Left Soft Key  **Accept.**
- ▶ **Flip Open:** Allows you to Flip open the phone to answer an incoming call.

Senior Mode

Senior mode is a function that amplifies a sound for seniors to hear the voice well by emphasizing a low voice. It is used for enhancing the speech quality while you are on the phone.

You can set the Senior Mode to On or Off.

Time & Cost

Allows you to view information about Call Duration and Data Counter.

Accessability

- ▶ **TTY:** Allows you to enable TTY Mode in order to contact other TTY devices. Select from **TTY Full, TTY Talk, TTY Hear, TTY Off.**
- ▶ **Hearing Aid:** Allows you to turn the hearing aid functionality on or off.


Bluetooth

Your phone has built-in Bluetooth wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a hands-free device, PC, laptop, or other phones. The devices registered in your phone can only be connected one at a time (To make a connection to the same type of device or change Bluetooth preferences, disconnect the existing device first).


You can also exchange, for example, business cards, calendar items, and pictures.

To access Bluetooth, from the standby screen, press the Left Soft Key  **Menu**, **Settings**, and  **Bluetooth**.


Hands-free profile

This  appears when the hands-free profile is used between the hands-free device. This allows you to call using a Bluetooth connection.

A2DP profile

This  appears when the A2DP profile is used between the stereo headset device and the phone. This allows you to listen to an audio clip. A2DP is the Advanced Audio Distribution Profile, which provides support for streaming either mono or stereo audio using Bluetooth.

Hands-free + A2DP profile

This  appears when both profiles of the hands-free and the A2DP are used between the compatible device and the phone. This allows you to call and listen to an audio clip using a Bluetooth connection.

When using each device, see the manual that comes with the device.

Note

We recommend that your phone and the Bluetooth device you are communicating with should be no more than 10 meters apart. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

Turn On/Off

Allows you to turn your Bluetooth functionality on or off.

Search New Device

This function allows you to search for and add new devices.

My Devices

This function allows you to view the list of all devices that are paired with your phone.

My Bluetooth Info

This menu allows you to configure the profile for Bluetooth.

Settings

- ▶ **Device Visibility:** Allows you to set your device to be visible to other Bluetooth devices.
- ▶ **Device Name:** Allows you to change the handset's name which can be seen by other Bluetooth devices.
- ▶ **Supported Services:** Shows you all services that the handset supports.
- ▶ **My Bluetooth Address:** Displays your device's Bluetooth address.

To pair with another device

- 1 From the standby screen, press the Left Soft Key  **Menu, Settings,**  **Bluetooth,** and  **Search New Device.**
- 2 If you want to stop searching, press the Right Soft Key  **Cancel.**
- 3 All of the devices found are displayed.
- 4 Select the desired device by pressing the OK Key  **Add** and entering the password.

Memory

This menu allows you to configure your Memory settings.

To access Memory, from the standby screen, press the Left Soft Key  **Menu, Settings,** and  **Memory.**

Used Space

This function shows the memory status of the handset.

▶ Phone Common

This function shows the Memory Status of the phone and the memory being used by Audio, Image, Video, Multimedia Message, Email, Java, and Others types of files.

▶ Phone Reserved

This function shows the status of the reserved memory used by Text Messages, Contacts, Calendar items, Tasks, and the Notepad.

▶ SIM Card

This function shows the status of the SIM Card memory.

Applications

This menu allows you to configure application settings

To access Applications, from the standby screen, press the Left Soft Key  **Menu, Settings,** and  **Applications.**

Messages

For more details, refer to Message Settings on page 29.

Browser

This menu allows you to configure the Browser settings.

Appearance

You can choose the settings of the browser appearance (Text size, Character Encoding, Show Image, JavaScript).

Cache

The web pages you have accessed are stored in the phone memory. This menu allows you to manage that function.

- ▶ **Clear Cache:** Remove all cached data in the memory.
- ▶ **Cache:** Allows you to turn the memory cache on or off.

Note

Cache is a type of buffer memory, which is used to store data temporarily, especially when it is online.

Cookies

The information of services you have accessed are stored in what is called a cookie.

From this menu, you can choose to allow cookies or to delete cookies that are already on your phone.

Settings

Clear Login Info.

You can delete the history of ID or Password information that you have saved previously.

Screen Settings

You can change the settings of the browser screen (Rendering Mode).

Security

A list of the available certificates is shown.

- ▶ **Certificates:** You can see the list of certificates and view them in detail.
- ▶ **Clear Session:** Removes the secure session.

Navigation Mode

You can change the methods of browser navigation.

- ▶ **4 Way Navigation:** The cursor of the browser moves scroll amounts or follows hyperlinks.
- ▶ **Mouse Pointer:** You can move the cursor like a mouse pointer.

Secure Popup

You can activate or deactivate the pop-up which indicates a secure page.

Shortcuts

If set to On, you can use the Browser more quickly and conveniently with the keypad in the phone. If Shortcuts is on, the following shortcuts are available:

- | | |
|-------------------|------------------|
| 1. Enter URL | 2. This Page |
| 3. View Bookmarks | 4. Page Overview |
| 5. Full Screen | 6. Saved Pages |
| 7. Page Up | 8. Recent Pages |
| 9. Zoom In | 0. Search Text |
| *. Page Down | #. Zoom Out |

You can adjust the Browser text and image size by pressing the up and down Volume Keys to zoom in and out.

Voice Command

This menu allows you to set various Voice command options. Refer to page 42.

TTS (Text-to Speech)

When you set this on, text messages and Notepad notes be read out.


Note

When the phone is in Vibration mode, TTS does no work.

Phone Information

This menu is used to view My Numbers, Manufacturer, Model Name, Device ID, Hardware Version, Software Version, Language.

To access Phone Information, from the standby screen, press the Left Soft Key

 **Menu, Settings,** and  **Phone Info.**

Accessories

There are a variety of accessories available for your mobile phone, some of which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery.



Battery

Standard battery is available.



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

For Your Safety

The highest SAR value for this model phone when tested for use at the ear is 0.77 W/kg and when worn on the body, as described in this user guide, is 0.58 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID ZNFLG440G.